## owner's manual

## WELCOME TO THE SPA LIFE!

Please enjoy your new Marguis spa, but think safety first. Read your Owner's Manual in its entirety before installing your spa and encourage all spa users to do the same. More than just common sense, this Owner's Manual provides vital safety and operational information.

#### CARE AND ENJOYMENT GUIDE

A Care and Enjoyment guide is located in the back of the manual. It features important water treatment and maintenance information, as well as spa enhancement products that are available at your Marquis dealer. Keep this guide handy to answer all your spa questions.

We sincerely hope your spa life is a pleasant experience. If problems should arise, contact your Marquis dealer first. Or contact Marquis Corp. at any of the following:

Email: service@marquiscorp.com Web: www.marquisspas.com



MARQUIS SPAS. JUST WHAT YOU NEED

596 Hoffman Road Independence, OR 97351

PAGE 1

## product reference

#### SERIAL NUMBER LOCATION

You will find the serial number on the Underwriters Laboratories tag in the equipment area.

# PLEASE FILL OUT AND KEEP FOR FUTURE REFERENCE

Name of Purchaser		
Date of Purchase		
Address		
City		
Signature		
Telephone		
Spa Model/Color		
Spa Serial #		
Pack Serial #		
Dealer's Name		
Dealer's Address		
City	State	Zip Code
Telephone		

Every effort has been made to ensure the accuracy of this manual. However, Marquis Spas® reserves the right to improve its product without notice. This could create a minor variation between this manual and the actual product you receive. We apologize for any inconvenience this may cause.



PAGE 2

# owner's manual index

IMPORTANT SAFETY INSTRUCTIONS	
120V, Cord Connected Models	
240V, Permanently Installed or Converted Models	5
All Spa Models	
Personal Safety	8-9
INSTALLATION INSTRUCTIONS	
Location	10-11
Filter Cartridges	
Electrical Requirements	.13-14
STARTING YOUR SPA	15-17
OPERATING YOUR SPA	18
SPA MODELS	19-37
Spirit	
Mirage	22-23
Wish	24-25
Quest	-
Destiny	
Reward	
Euphoria Silver Anniversary Reward	
Silver Anniversary Euphoria	
SPA CONTROL OPERATION	
Spirit, Mirage, and Wish	38-41
Quest, Destiny, Reward, Euphoria, Silver Anniversary Reward,	10 10
and Silver Anniversary Euphoria	42-40
EQUIPMENT DIAGRAMS	
Spirit, Mirage, and Wish	
Quest and Destiny	
Reward, Escape, Euphoria,	
Silver Anniversary Reward, and Silver Anniversary Euphoria	50
	51-53
LCD Diagnostic Messages	52-53
MARQUIS CARE AND ENJOYMENT GUIDE	54-67
	68-74
	75-76

PAGE 3

The following instructions are required to be printed by Underwriters Laboratories (UL) as a condition of the listing of this product. They contain important safety information. We strongly encourage you to read and apply them.

# IMPORTANT SAFETY INSTRUCTIONS

WHEN INSTALLING AND USING THIS ELECTRICAL EQUIP-MENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

# 1. READ AND FOLLOW ALL INSTRUCTIONS

- 2. **WARNING:** To reduce the risk of injury, do not permit children to use this product unless closely supervised at all times.
- 3. DANGER: RISK OF CHILD DROWNING. Extreme caution must be exercised to prevent unauthorized access by children. To avoid accidents, ensure that children cannot use the spa or hot tub unless they are supervised at all times.

## 120 VOLT, CORD CONNECTED MODELS

- 4. DANGER: RISK OF INJURY. Connect only to a grounded source.
- 5. Do not bury the power cord.
- 6. **WARNING:** To reduce the risk of electric shock, replace a damaged cord immediately.
- 7. A ground terminal (pressure wire connector) is provided on the surface of the control box inside the equipment compartment. This connector should be bonded with a minimum No. 8 AWG (8.4mm<sup>2</sup>) solid copper wire between this unit and any metal ladders, metal water pipes, metal enclosures of electrical equipment, conduit, or metal equipment within five feet (1.5m) of the spa. If the spa is located on a reinforced concrete pad, the reinforcing steel should also be bonded to the ground terminal.
- 8. **WARNING:** Your spa is equipped with a ground fault circuit interrupter (GFCI) on the end of the power supply cord. Before each use of the spa, with the plug connected to the power supply and the unit operating, press the "test" button. The unit should stop operating and the GFCI power indicator will go out. Wait thirty seconds and then reset the GFCI by pressing the "Reset" button. The GFCI power indicator will turn on, restoring power to the spa. If the interrupter does not perform in this manner, it is an indication of an electrical malfunction and the possibility of an electric shock. Disconnect the plug from the receptacle until the fault has been identified and corrected.

PAGE 4

## 240 VOLT, PERMANENTLY INSTALLED OR CONVERTED MODELS

- 9. A ground terminal is provided on the terminal block (TB-1, terminal 7) located inside the control box. To reduce the risk of electric shock, connect this terminal to the grounding terminal of your electrical service or supply panel with a continuous green, insulated copper wire. The wire must be equivalent in size to the circuit conductors supplying the equipment. In addition, a bonding terminal (pressure wire connector) is provided on the outside of the control box for bonding to local ground points. To reduce the risk of electric shock, this connector should be bonded with a No. 8 AWG (8.42mm<sup>2</sup>) solid copper wire to any metal ladders, water pipes, or other metal within five feet (1.5m) of the spa to comply with local requirements.
- 10. Your spa uses ground fault circuit interrupters in the electrical sub-panel. Before each use of the spa and with the unit operating press the Test button on each breaker. The switch should click over to the "Trip" position. Wait thirty seconds and reset each GFCI breaker by switching it completely off and then completely on. The switch should then stay on. If either of the interrupters does not perform in this manner, it is an indication of an electrical malfunction and the possibility of an electric shock. Disconnect the power until the fault has been identified and corrected.

#### ALL SPA MODELS

- 11. Install the spa so proper drainage is provided.
- 12. DANGER: RISK OF ELECTRIC SHOCK. Install the spa at least five feet (1.5m) away from metal surfaces, in accordance with the National Electric Code ANS/NMFPA70-1993. Each metal surface must be permanently connected to a minimum No. 8 (8.42mm<sup>2</sup>) solid copper conductor attached to the wire bonding connector on the terminal box provided for this purpose.
- 13. DANGER: RISK OF ELECTRIC SHOCK. Do not permit any appliance, such as a light, telephone, radio, or television, etc. within five feet (1.5m) of the spa or hot tub.
- 14. WARNING: To reduce the risk of injury:
- The water in the spa should never exceed 104°F (40°C). Water temperatures between 100°F (38°C) and 104°F (40°C) are considered safe for a healthy adult. Lower water temperatures are recommended for extended use (exceeding 10 minutes) and for young children.
- Since excessive water temperatures have a high potential for causing fetal damage during the early months of pregnancy, pregnant or possibly pregnant women should limit spa water temperatures to 100°F (38°C).
- Before entering a spa, the user should measure the water temperature with an accurate thermometer since the tolerance of temperatureregulating devices may vary as much as +/- 5°F (3°C).
- The use of drugs, alcohol, or medication before or during spa use may lead to unconsciousness with the possibility of drowning.
- Persons suffering from obesity or with a medical history of heart disease, low or high blood pressure, circulatory system problems, or diabetes should consult a physician before using the spa.

PAGE 5

- Persons using medications should consult a physician before using a spa since some medication may induce drowsiness while other medication may affect heart rate, blood pressure, and circulation.
- 15. DANGER: TO REDUCE THE RISK OF INJURY TO PERSONS. Do not remove the suction fittings.
- 16. DANGER: RISK OF INJURY: Never operate a spa if the suction guard(s) is broken or missing. Never replace a suction guard with one rated less than the flow rate marked on the original suction guard. The suction guard(s) in the spa are sized to match the specific water flow created by the pump. Should the need arise to replace the suction guard(s) or the pump, be sure that the flow rates are compatible.
- 17. **DANGER:** Children are especially sensitive to hot water. At no time should children have unsupervised access to the spa. Children must not be allowed to climb onto the spa cover. All Marquis spas are equipped with a locking cover that meets the ASTM F1346-91 Standard for Safety Covers. Always lock the child resistant locks after using the spa for your children's safety.

# **18. SAVE THESE INSTRUCTIONS.**

**WARNING:** Children should not use spas or hot tubs without adult supervision.

**WARNING:** Do not use spas or hot tubs unless all suction guard(s) are installed to prevent body and hair entrapment.

**WARNING:** Do not use drugs or alcohol before or during the use of a spa or hot tub to avoid unconsciousness and possible drowning.

**WARNING:** People using medications and/or having an adverse medical history should consult a physician before using a spa.

**WARNING:** The use of alcohol, drugs, and medication can greatly increase the risk of fatal hyperthermia.

**WARNING:** Before entering the spa or hot tub measure the water temperature with an accurate thermometer.

**WARNING:** Water temperature in excess of 104°F (40°C) may be injurious to your health.

**WARNING**: Prolonged immersion in a spa or hot tub may be injurious to your health.

**WARNING:** People with infectious diseases should not use a spa. **WARNING:** Pregnant or possibly pregnant women should consult a physician before using a spa or hot tub.

**WARNING:** To avoid injury, exercise care when entering and exiting the spa or hot tub.

**WARNING:** Do not use a spa or hot tub immediately following strenuous exercise.

**CAUTION:** Maintain water chemistry in accordance with manufacturer's instructions.

PAGE 6

#### SAFETY INSTRUCTIONS FOR FRENCH SPEAKING SPA OWNERS

**AVERTISSEMENT:** Ne pas placer d'appareil électrique (luminaire, téléphone, radio, téléviseur, etc.) moins de 1.52 m de cette cuve de relaxation.

**AVERTISSEMENT:** Ne pas laisser les enfants utiliser une cuve de relaxation sans surveillance.

**AVERTISSEMENT:** Pour éviter que les cheveux ou une partie du corps puissent être aspirés, ne pas utiliser une cuve de relaxation si les grilles de prise d'aspiration ne sont pas toutes en place.

**AVERTISSEMENT:** Pour éviter l'évanouissement et la noyade éventuelle, ne prendre ni drogue ni alcool avant d'utiliser une cuve de relaxation ni quand on s'y trouve.

**AVERTISSEMENT:** Les personnes qui prennent des médicaments ou ont des problemès de santé devraient consulter un médecin avant d'utiliser une cuve de relaxation.

**AVERTISSEMENT:** La consommation d/alcool ou de drogue augmente considérablement les risques d'hyperthermie motrelle dans une cuve de relaxation.

**AVERTISSEMENT:** Avant d'utiliser une cuve de relaxation mesurer la température de l'eau l'aide d'un thermométre précis.

**AVERTISSEMENT:** Il peut être dangereux pour la santé de se plonger dans de l'eau plus de 40°C.

**AVERTISSEMENT:** L'utilisation prolongée d'une cuve de relaxation peut être dangereuse pour la santé.

**AVERTISSEMENT:** Les personnes atteintes de maladies infectieuses ne devraient pas utiliser une cuve de relaxation.

**AVERTISSEMENT:** Les femmes enceintes, que leur grossesse soit confirmée ou non, devraient consulter un médecin avant d'utiliser une cuve de relaxation.

**AVERTISSEMENT:** Pour éviter des blessures, user de prudence en entrant dans une cuve de relaxation et en sortant.

**AVERTISSEMENT:** Ne pas utiliser une cuve de relaxation immédiatement aprés un exercice fatigant.

**ATTENTION:** La tenteur de l'eau en matières dissoutes doit être conforme aux directives du fabricant.

PAGE 7

#### PERSONAL SAFETY

Prolonged immersion in hot water can result in **HYPERTHERMIA**, a dangerous condition which occurs when the internal temperature of the body reaches a level above normal (98.6°F, 37°C). The symptoms of hyperthermia include dizziness, fainting, drowsiness, lethargy, and a body temperature above 98.6°F (37°C). The physical effects of hyperthermia include unawareness of impending hazard, failure to perceive heat, failure to recognize the need to exit the spa, physical inability to exit the spa, fetal damage in pregnant women, and unconsciousness resulting in a danger of drowning.

**WARNING:** The use of alcohol, drugs, or medication can greatly increase the risk of fatal hyperthermia in hot tubs and spas.

Persons taking medications which induce drowsiness such as tranquilizers, antihistamines, or anticoagulants should not use the spa. Pregnant women and persons with a medical history of heart disease, diabetes, or high blood pressure should consult a physician before using the spa.

PAGE 8

### PERSONAL SAFETY DO's:

- Be sure your spa is connected to the power supply <u>correctly</u> only use a licensed electrical contractor.
- Shut off power supply (unplug 120V models) before draining the spa or servicing the electrical components.
- Test the Ground Fault Circuit Interrupter (GFCI) monthly.
- Always test the water temperature with an accurate thermometer before entering the spa to be sure that it's a safe temperature.
- Remember that wet surfaces can be very slippery. Take care when entering and exiting the spa.
- Lock the DuraCover when the spa is not in use, whether it is empty or full of water.
- Keep the water clean and sanitized with correct chemical care.
- Turn on the jets when adding ANY chemicals to the spa water.
- Clean the filter cartridge(s) monthly to remove debris and mineral buildup which affects the performance of the hydrotherapy jets, limits the flow, or trips the high limit thermostat which will turn off the entire spa.

#### PERSONAL SAFETY DO NOT's:

- Don't use the spa with the equipment compartment door removed.
- Don't use the spa for more than 10 minutes of time at water temperatures in excess of 102°F (39°C).
- Don't allow the jet pump(s) to operate for an extended period of time with the cover in place. Extended pump operation causes a slow heat buildup due to water friction. The spa equipment controls are equipped with a built-in safety timer that automatically shuts off the jet pump(s) after 15 minutes of continuous operation should it have been left on inadvertently.
- Don't operate the spa at any time with the filter cartridges removed.
- Don't lift or drag the cover by using the tie-down straps; always lift and carry by using the external handles.
- Don't store chemicals in the spa's equipment compartment.
- Don't hesitate to call your Marquis Spas dealer with any questions or maintenance concerns.

PAGE 9

## installation instructions

#### LOCATION

For your portable spa to function properly and safely, it must be located on a hard, flat, level surface. Inground spas require special installation techniques and should be planned in conjunction with your spa dealer. Improper installation can result in structural damage to the spa and the voiding of your spa warranty. Items to discuss with your dealer include: Local construction codes, electrical service requirements, serviceability of equipment, present underground obstructions such as gas, water, and telephone lines, safety measures such as fences and locks, and visibility of the spa installation from the home, street, and neighbors.

- Allow for sufficient water drainage around the spa to help preserve the equipment and support structure. This includes indoor installations.
- A filled spa can weigh up to 4,000 pounds and the location should support the weight of the filled spa.
- Locate the equipment compartment where it will be accessible. Your spa MUST be installed to permit access for servicing the equipment above and/or below any decks or floors. Access is essential and must allow adequate room for service.
- Leave access to the circuit breakers in the sub panel (240V models) or to the interrupter switch (GFCI, 120V models) on the end of the power cord.
- Be sure the spa is level and in the final position BEFORE filling with water. Check for power cords, tools, and hoses that may be caught underneath the spa.
- IMPORTANT: DO NOT LET AN EMPTY SPA REMAIN EXPOSED TO DIRECT SUNLIGHT. Spa surface temperatures can reach in excess of 150°F (65°C) if left exposed to the sun. Significant damage can occur if this is allowed to happen, including warping and blistering of the surface. Damage, that occurs as a result of this exposure, is not covered under the warranty.
- **CAUTION:** Never try to move a spa that has not been fully drained. To do so could result in damage to the spa and physical injury to the mover.

PAGE 10

## installation instructions

## OUTDOOR AND PATIO INSTALLATION

To install the spa outdoors, we recommend a reinforced concrete pad at least four inches thick. The reinforcing material should be attached to a #8 AWG bonding wire per national and local electrical code.

If you place the spa on the ground, even temporarily, place concrete pavers under the entire bottom of the spa. The concrete pavers should be a least two inches thick and level across the entire surface. The spa will inevitably settle and not remain level on this surface, thus it's important to get it onto a solid foundation as soon as possible.

#### DECK INSTALLATION

Be sure the deck can support the weight of your filled spa by checking the deck's maximum load capacity. Consult a qualified building contractor or structural engineer. Minimum requirement is 100 pounds per square foot.

#### INDOOR INSTALLATION

There are special requirements if you place your spa indoors. Flooring material must provide adequate traction when wet. Proper drainage is essential to prevent water puddling. To avoid increased humidity you need to provide proper ventilation to the area. The addition of a ventilation system is recommended.



PAGE 11



Shut-off valve in open position



1) Center filter cartridge over canister



2) Screw filter cartridge in place



3) Snap Vortex filter top in place

PAGE 12

MARQUIS SPAS

# installation instructions

#### SHUT-OFF VALVES

Your spa is equipped with shut-off valves (see EQUIPMENT DIAGRAM) that shut off the water flow to the equipment system for dealer service. At times, a new spa or one that has recently been serviced, may have the shut-off valves partially closed which can restrict the water flow and hinder jet performance. Be sure the valves are fully open.

#### FREEZE PROTECTION

When a freeze condition is detected (which occurs when the temperature in the heater housing drops to 55°F, (13°C) for 240V models; to 40°F (4°C) for 120V models) the jet pump(s) is automatically activated. In areas with extremely cold winter conditions, your spa should be fine as long as it is left running at normal operating temperatures. For extra protection see your dealer for an optional freeze sensor. If you plan to turn the spa off, follow the instructions in this manual (see SUSPENDED USE OR WINTERIZING YOUR SPA).

#### OVERHEATING

In the case of extended hot weather, the spa water temperature may reach and maintain 104°F to 106°F (40°C to 41°C) or higher. This is due to the ambient temperature and the full insulation in the spa cabinet. You may have the option of shortening the pump-run time. See SPA CONTROL OPERATION for available options.

#### FILTER CARTRIDGE(S)

Your portable spa is equipped with the Constant Clean Filtration system. Depending on your spa model, it features one or two Vortex filters.

**NOTE:** It is very important that the components of these filtration systems be installed properly in the proper part of the spa.

- 1. Hold the Vortex filter cartridge and center it in the opening of the filter housing.
- 2. Use the filter handle and turn the filter cartridge clockwise to screw it in place. (Use caution not to overtighten as damage may occur to threads and is not covered under warranty.)
- 3. Grasp the edge of the dome-shaped Vortex filter top. Center it over the ring and gently snap in place.



Safety guard of suction fitting must remain in place.

# installation instructions


#### SUCTION GUARDS

The suction guard(s) in the footwell of your spa is an opening through which the jet pump(s) draws water. Suction fittings are equipped with a safety guard. Suction through the fittings can be strong. The safety guard(s) must remain in place and undamaged. A fitting with a damaged guard(s) can be dangerous, especially to small children or people with long hair. Should any part of the body become drawn to a fitting, turn the jet pump(s) off immediately. Long hair should be restrained in a bathing cap, never allow it to float freely in the spa. Replace any missing or damaged suction guard(s).

**NOTE:** It is normal for the flow rates of the suction fittings to vary from strong to barely noticeable.

#### ELECTRICAL REQUIREMENTS

It is the responsibility of the spa owner to ensure that all electrical connections are made in accordance with all electrical codes in effect at the time of installation.

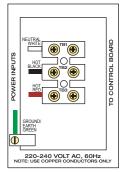

240V electrical diagram

## 240 Volt:

All connections must be made in accordance with the wiring diagram found on the inside of the control box cover. Connections must be made with copper conductors only – do not use aluminum wiring with this system. All conductors, circuit breakers, and/or fuses must be sized in accordance to the total amperage load as specified:

- · Permanently connected
- Rated 240V, 60 Hz, 50A, three wires (#6 copper) plus ground (#8 AWG copper)
- Fuse or circuit breaker size: 50 amp

This equipment is designed to operate on 60Hz alternating current only at a voltage of 240 (+ or -). Units to be operated at 240V must have all connections made by a qualified electrician in accordance with all electric codes in effect at the time of installation. All 240V units require four wires (line 1, line 2, neutral, and ground). Refer to the label at the terminal block.

**NOTE:** Ensure the GFCI is properly installed. Failure to do so may result in spa malfunction or damage which is not warranted.

PAGE 13

## installation instructions

A pressure wire connector is located on the exterior of the control box. This pressure wire connector should be bonded with at least #8 AWG (8.42mm<sup>2</sup>, #6 in Canada) copper wire to any metal ladder, metal water pipe, common bonding grid (reinforced concrete slab, ground plate beneath the spa), or any other metal within five feet of the spa.


#### 120 Volt:

120V units must only be connected to a properly grounded, grounding type 15 amp dedicated receptacle. 120V equipment is designed to operate on 60Hz alternating current only at a voltage of 120, 12.5 amp. maximum load. Only use the cord provided with the spa, do not use an extension cord.


#### To Convert 120V to 240V:

All connections must be made by a licensed electrician.

- 1. Disconnect power by unplugging from receptacle and remove cord from terminal block.
- 2. Move both red wires TB-1 to TB-4 as indicated by gray area.
- 3. Move the Heater Mode selector (J23) on the Control Board from (20A) to (50A) position. Ground Fault Circuit Interrupters (GFCI), #8145, are available from your Marquis dealer.
- 4. Refer to 240V installation, page 13.

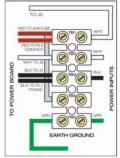

120V electrical diagram

 

Convert 120V to 240V electrical diagram

PAGE 14



Screw pump plug into face of pump.



Close drain valve in equipment bay (shown in open position).



Screw plug in hose connector.



Fill spa with water to two-thirds of the way up the Vortex skimmer opening.

PAGE 15

MARQUIS SPAS

## starting your spa

#### START-UP PROCEDURE

Your spa is equipped with solid-state Comfort Controls specific to your spa model. Please see SPA CONTROL OPERATION for your specific spa model.

To start your spa, you need a spa water test kit and an underwater thermometer. It is important to follow each of these steps when starting your spa. Once you have completed the following steps, refer to the instructions in your start-up kit for proper start-up water maintenance, or see MARQUIS CARE AND ENJOYMENT GUIDE, Marquis SpaCare Start-up Kit.

**NOTE:** Your spa has been filled and test-run at the factory. The first time your spa is filled with water, some discoloration from residual test water may appear. This will disappear when the spa is completely filled and the filtration system is functioning. Test the water for the proper chemical balance and adjust as necessary. Marquis SpaCare products are recommended. (See WATER TREATMENT.) **PROPER CHEMICAL BALANCE IS IMPORTANT** for your safety and the longevity of your spa.

#### THERAPY PUMP(S)

Allow the spa to circulate on high-speed (see SPA CONTROL OPERATION) for four to five minutes to discharge air from the plumbing system. Do not expect hot water immediately from the jets; the heater will take several hours to heat the water.

#### Start-up procedure for Spirit, Mirage, and Wish:

- 1. Place spa on a hard, flat, level surface. Make sure the power supply is off.
- 2. Make sure the suction guard(s) in the footwell are in place and undamaged.
- 3. Open the equipment door. Screw the pump plug (supplied in packet) into the face of the pump. (See EQUIPMENT DIAGRAM.) Close the drain valve in the equipment bay. Screw the plug in the hose connector located on the external DuraBase. Tighten all disconnects and open all shut-off valves.
- 4. Install filter cartridge. (See INSTALLATION INSTRUCTIONS, Filter Cartridge.)
- 5. Fill the spa with water to two-thirds of the way up the Vortex skimmer opening. The use of a Fill Filter (part #5039) is recommended, especially in areas with high mineral content in the water.
- 6. Turn the power on and wait five seconds.



Screw pump plug into face of pump.



Close drain valve in equipment bay (shown in open position).



Screw plug in hose connector.



Fill spa two-thirds of the way up the Vortex skimmer opening.



Vent air by slightly opening pump unions.

PAGE 16

MARQUIS SPAS

## starting your spa

 
- After a few seconds the spa should have water flowing from the jets. If the pump has not primed and the water is not flowing from the jets after two minutes **TURN OFF POWER TO THE SPA** and vent air from the pumps by slightly opening the pump unions.
- 8. The factory default setting for water temperature is 102°F (39°C). Use the TEMP pad on the control panel to set the water temperature to the desired level. (See TEMPERATURE DISPLAY AND ADJUSTMENT.) Your spa will heat at the rate of approximately one degree per hour for 120V systems and five degrees per hour for 240V systems.

#### Start-up procedure for Quest, Destiny, Reward, Euphoria, Silver Anniversary Reward, and Silver Anniversary Euphoria:

- 1. Place spa on a hard, flat, level surface. Make sure the power supply is off.
- 2. Make sure the suction guard(s) in the footwell are in place and undamaged.
- 3. Open the equipment door. For Reward, Escape, and Euphoria, check to make sure the freeze line between pump one and pump two is properly connected. For Quest and Destiny, screw the pump plug (supplied in packet) into the face of the pump. (See EQUIPMENT DIA-GRAM.) Close the drain valve in the equipment bay. Screw the plug in the hose connector located on the external DuraBase. Tighten all disconnects and open all shut-off valves.
- 4. Install filter cartridges. (See INSTALLATION INSTRUCTIONS, Filter Cartridge(s).)
- 5. Fill the spa with water to two-thirds of the way up the Vortex skimmer openings. The use of a Fill Filter is recommended, especially in areas with high mineral content in the water.
- 6. Turn the power on.
- 7. Your spa is now in "pump priming" mode and a "Pr" message displays in the LCD window of the control panel. While in this mode the spa appears idle, which lasts approximately four to five minutes if not exited manually. To exit manually, press the TEMP pad.
- 8. At this time the spa should have water flowing from the jets. If the pump has not primed and the water is not flowing from the jets after two minutes **TURN OFF POWER TO THE SPA** and vent air from the pumps by slightly opening the pump unions. After turning the power on again, the spa initiates a new priming mode. Repeat steps above.



Use TEMP pad to set water temperature.



## starting your spa

- 9. The system requires approximately two minutes of water flow to determine the water temperature. After two minutes of water flow, the temperature is displayed as actual water temperature. After you have manually exited the priming mode (or allowed the spa to automatically exit) the LCD window momentarily displays 102°F (39°C) and then the display switches to - - °F.
- 10. The factory default setting for water temperature is 102°F (39°C). Use the TEMP pad on the control panel to set the water temperature to the desired level. (See SPA CONTROL OPERA-TION, Temperature Display And Adjustment.) Your spa heats at the rate of approximately five degrees per hour for 240V systems.

#### DURACOVER

When the spa is not in use, the DuraCover should be kept on the spa to retain the water's heat and to keep out dirt, leaves, etc. Your heater maintains a constant water temperature between uses.

For your safety and convenience, the cover is equipped with adjustable straps, safety locks, and handles. Use the exterior handles to remove and replace your cover. Marguis suggests that you use the safety locks to help keep out unintended users and prevent covers from being blown off in windy conditions. For high wind areas, Secure Straps (part #8140) are available. DuraLift (part #8225) cover lifts are also available to assist you in cover removal. (See SPA ENHANCEMENTS at back of this manual.)



DuraCover helps maintain a constant water temperature.

PAGE 17



Power Swirl Jet



Cyclo Swirl Jet



HK40 Jet



Tri-Zone Control



Air Control

# operating your spa

## MAXIMUM THERAPY JETTING SYSTEM

### PERSONAL THERAPY JETS

This small jet provides a targeted stream of water.

## CASCADE NECK JETS

The Cascade Neck jets are turned on and off (when the jet pump is on) using the small teardrop neck jet control lever.

## POWER BOOST JET

The direction of water flow can be changed by redirecting the central nozzle. The water flow can be adjusted by turning the jet face using the four tabs.

## POWER SWIRL JET

This rotating jet provides a firm, broad area of circular massage action. The water flow can be adjusted by turning the jet face using the four tabs.

## CYCLO BOOST JET

Large, versatile jet flows in a straight stream. The water flow can be adjusted by turning the jet face using the four tabs.

#### CYCLO SWIRL JET

Large, versatile jet can flow straight or can be made to rotate by pushing the nozzle to the side (push in the direction indicated by the point of its teardrop shape). The water flow can be adjusted by turning the jet face using the four tabs.

#### HYDROKINETIC (HK40™) JET

High-flow jet strategically positioned within the spa to provide passive and whole body massage.

## TRI-ZONE CONTROL

Use this control to divert water to each of the three zones. (See TRI-ZONE CONTROL.)

## AIR CONTROL

Use this control to increase or decrease the air flow to the various jets.

PAGE 18




Marquis Spas is celebrating 25 years of manufacturing spas with the development of two special spa models – Silver Anniversary Reward and Silver Anniversary Euphoria.

## spa models

The following section provides valuable information regarding your specific spa model, including location of jets and components, and how to operate the jets with the Tri-Zone control(s).

We have strived to make this information as concise and easy to understand as possible. If you have any questions regarding your specific Marquis spa model, please contact your Marquis spa dealer, or you may contact Marquis Spas by a method located on page one of this Owner's Manual.

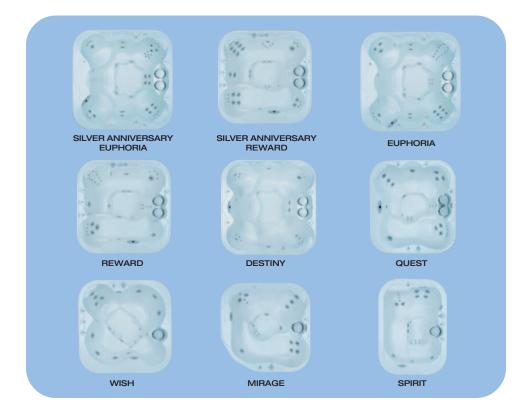

# the spirit




Use the Bather's panel to set the temperature, select the filtration, and turn on the jets and lights.

15 Use the auxiliary Jet Control panel to turn on jets.

19 This valve controls the water flow of the Cascade Neck jets.


20 Use the Tri-Zone control to select the jet zones.

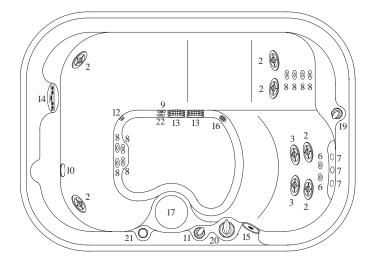

#	<b>Component Identification</b>	Qty.
2 3 6 7 8 9 10 11 12 13 14 5 16 17 9 20 21 22	Suction Fittings Bather's Control Panel Auxiliary Jet Control Panel Floor Drain Filter Canister Cascade Neck Jet Valve	6 2 2 3 8 1 1 1 2 1 1 1 1 1 1 1 1
	Physical Specifications	Size
	Dimensions Height Interior Depth Seating Positions Weight Dry/Lbs. Weight Full/Lbs. Water Capacity/Gallons Total Therapy Jets	60" × 84" 29" 28" 4 410 1786 165 21

PAGE 20

# spirit tri-zone control

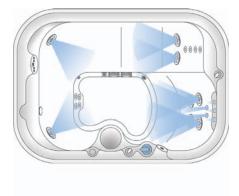


**ZONE 1** Upper-, mid- and lower-back jets.\*





ZONE 2 Lowerbody jets.\*



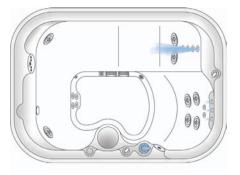

**ZONE 3** Upper- and mid-back



\*Cascade Neckjets operate in every zone.

PAGE 21

## the mirage




Use the Bather's panel to set the temperature, select the filtration, and turn on the jets and lights.

15 Use the auxiliary Jet Control panel to turn on jets.

19 This valve controls the water flow of the Cascade Neck jets.

20 Use the Tri-Zone control to select the jet zones.

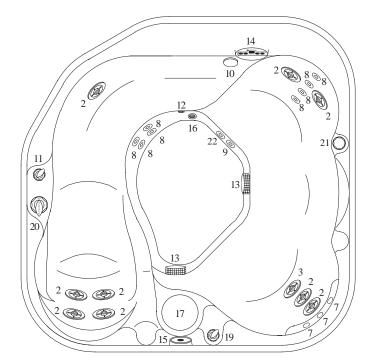

#	<b>Component Identification</b>	Qty.
2 3 7 8 9 10 11 12 13 14 15 16 17 19 20 21 22	Air Control Heat Sensor Suction Fittings Bather's Control Panel Auxiliary Jet Control Panel Floor Drain Filter Canister Cascade Neck Jet Valve Tri-Zone Control	9 1 3 8 1 1 1 2 1 1 1 1 1 1 1 1 1 1
	Physical Specifications	Size
	Dimensions Height Interior Depth Seating Positions Weight Dry/Lbs. Weight Full/Lbs. Water Capacity/Gallons Total Therapy Jets	77" x 77" 34" 32.5" 5 450 2660 265 21


PAGE 22

# mirage tri-zone control



ZONE 1 Upper-, mid- and lower-back jets.\*



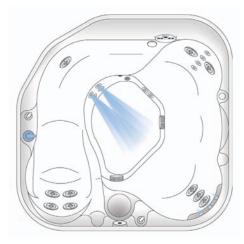

PAGE 23

ZONE 2 Lowerbody jets.\*



**ZONE 3** Upper- and mid-back jets.\*



\*Cascade Neckjets operate in every zone.

## the wish




Use the Bather's panel to set the temperature, select the filtration, and turn on the jets and lights.

15 Use the auxiliary Jet Control panel to turn on jets.

19 This valve controls the water flow of the Cascade Neck jets.

20 Use the Tri-Zone control to select the jet zones.

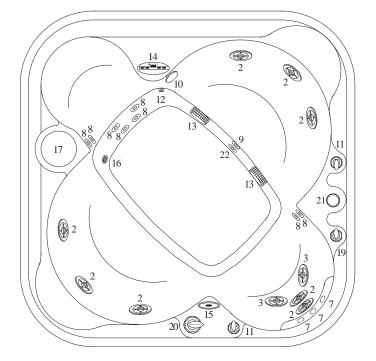

#	<b>Component Identification</b>	Qty.
2 3 7 8 9 10 11 12 13 14 15 16 17 9 20 21 22	Power Boost Jets Power Swirl Jets Cascade Neck Jets HK40 Jets Ozone Injector Fitting Light Air Controls Heat Sensor Suction Fittings Bather's Control Panel Auxiliary Jet Control Panel Floor Drain Filter Canister Cascade Neck Jet Valve Tri-Zone Control	8 2 3 8 1 1 2 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1
	Physical Specifications	Size
	Dimensions Height Interior Depth Seating Positions Weight Dry/Lbs. Weight Full/Lbs. Water Capacity/Gallons Total Therapy Jets	77" x 77" 34" 32.5" 6 475 2810 280 21

PAGE 24

# wish tri-zone control



ZONE 1 Upper-, mid- and lower-back jets.\*







PAGE 25

ZONE 2 Lowerbody jets.\*



**ZONE 3** Whirlpool jets.\*



\*Cascade Neckjets operate in every zone.

## the quest




Use the Bather's panel to set the temperature, select the filtration, heat modes, and turn on the jets and lights.



15 Use the auxiliary Jet Control panel to turn on jets.

19 This valve controls the water flow of the Cascade Neck jets.

20 Use the Tri-Zone control to select the jet zones.

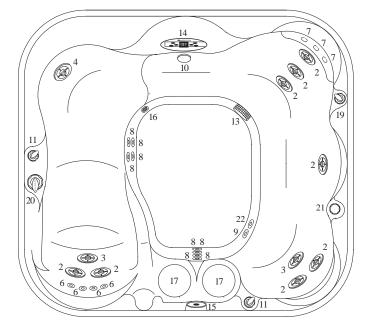

#	Component Identification	Qty.
2 3 4 6 7 8 9 10 11 13 14 5 16 17 9 20 21 22	Power Boost Jets Power Swirl Jets Cyclo Boost Jets Personal Therapy Jets Cascade Neck Jets HK40 Jets Ozone Injector Fitting Light Air Controls Suction Fitting Bather's Control Panel Auxiliary Jet Control Panel Floor Drain Filter Canisters Cascade Neck Jet Valve Tri-Zone Control	8 2 1 4 3 8 1 1 2 1 1 1 1 2 1 1 1 1 1 1
	Physical Specifications	Size
	Dimensions Height Interior Depth Seating Positions Weight Dry/Lbs. Weight Full/Lbs. Water Capacity/Gallons Total Therapy Jets	77" x 84" 34" 32.5" 6 600 3102 300 26

PAGE 26

# quest tri-zone control



**ZONE 1** Upper-, mid- and lower-back jets.\*







ZONE 2 Lowerbody jets.\*



**ZONE 3** Upper- and mid-back jets.\*



\*Cascade Neck jets operate in every zone.

PAGE 27

## the destiny




Use the Bather's panel to set the temperature, select the filtration, heat modes, and turn on the jets and lights.



15 Use the auxiliary Jet Control panel to turn on jets.

19 This valve controls the water flow of the Cascade Neck jets.

20) Use the Tri-Zone control to select the jet zones.

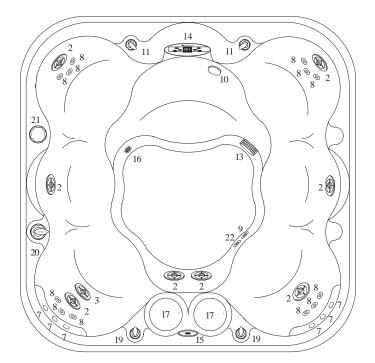

#	<b>Component Identification</b>	Qty.
2 3 7 8 9 10 11 13 14 15 16 17 9 20 21 22	Bather's Control Panel Auxiliary Jet Control Panel Floor Drain Filter Canisters Cascade Neck Jet Valves Tri-Zone Control	8 1 6 12 1 1 2 1 1 1 2 2 1 1 1 1
	Physical Specifications	Size
	Dimensions Height Interior Depth Seating Positions Weight Dry/Lbs. Weight Full/Lbs. Water Capacity/Gallons Total Therapy Jets	84" × 84" 34" 32.5" 7 700 3702 360 27

PAGE 28

# destiny tri-zone control



**ZONE 1** Upper- and mid-back, lower-body jets.\*





PAGE 29

ZONE 2 Lowerbody jets.\*



**ZONE 3** Upper-back jets.\*



\*Cascade Neck jets operate in every zone.

## the reward



Use the Bather's panel to set the temperature, select the filtration, heat modes, and turn on the jets and lights.




15 Use the auxiliary Jet Control panel to turn on jets.

19 This valve controls the water flow of the Cascade Neck jets.

20)

Use the Tri-Zone control to select the jet zones.

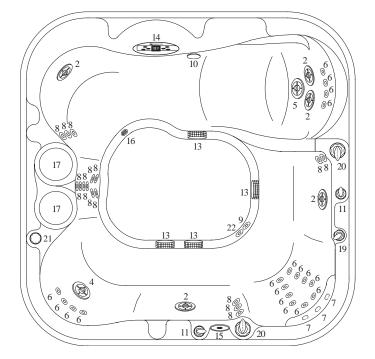

#	<b>Component Identification</b>	Qty.
2 4 5 6 7 8 9 101 12 3 4 15 6 7 8 9 101 12 3 4 15 6 7 9 21 22	Suction Fittings Bather's Control Panel Auxiliary Jet Control Panel Floor Drain Filter Canisters Cascade Neck Jet Valve	5 1 1 18 3 16 1 1 2 1 4 1 1 2 1 2 1 2 1 1
	Physical Specifications	Size
	Dimensions Height Interior Depth Seating Positions Weight Dry/Lbs. Weight Full/Lbs. Water Capacity/Gallons Total Therapy Jets	84" x 84" 34" 32.5" 6 740 3659 350 44

PAGE 30

# reward tri-zone control



ZONE 1 Upper-, mid- and lower-back jets.\*



**ZONE 4** Upper-, mid- and lower-back jets.\*



**ZONE 2** Upper- and mid-back jets.\*

ZONE 5 Lowerbody jets.\*





**ZONE 3** Whirlpool jets.\*



**ZONE 6** Whirlpool jets.\*



\*Cascade Neckjets operate in every zone.





PAGE 31

## the euphoria



Use the Bather's panel to set the temperature, select the filtration, heat modes, and turn on the jets and lights.




15 Use the auxiliary Jet Control panel to turn on jets.

19 This valve controls the water flow of the Cascade Neck jets.



Use the Tri-Zone control to select the jet zones.

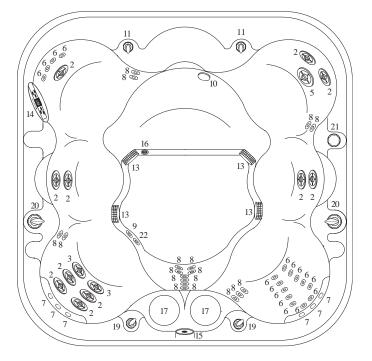

#	<b>Component Identification</b>	Qty.
2 3 5 6 7 8 9 10 11 3 4 15 16 17 19 20 21 22	Suction Fittings Bather's Control Panel Auxiliary Jet Control Panel Floor Drain Filter Canisters Cascade Neck Jet Valves Tri-Zone Controls	11 2 1 6 17 1 1 2 4 1 1 2 2 2 1 1
	Physical Specifications	Size
	Dimensions Height Interior Depth Seating Positions Weight Dry/Lbs. Weight Full/Lbs. Water Capacity/Gallons Total Therapy Jets	90" x 90" 35.5" 34" 7 825 4161 400 53

PAGE 32

# euphoria tri-zone control



ZONE 1 Upper-, mid- and lower-back jets.\*



**ZONE 4** Upper-, mid- and lower-back jets.\*



ZONE 2 Lowerbody jets.\*

ZONE 5 Upper- and mid-back jets.\*






**ZONE 3** Whirlpool jets.\*




**ZONE 6** Whirlpool jets.\*



\*Cascade Neckjets operate in every zone.

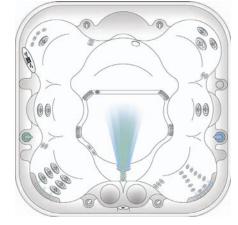

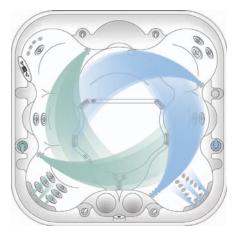

PAGE 33

## the silver anniversary reward

Use the Bather's panel to set the temperature, select the filtration, heat modes, and turn on the jets and lights.




14

15 Use the auxiliary Jet Control panel to turn on jets.

19) This valve controls the water flow of the Cascade Neck jets.




Use the Tri-Zone control to select the jet zones.

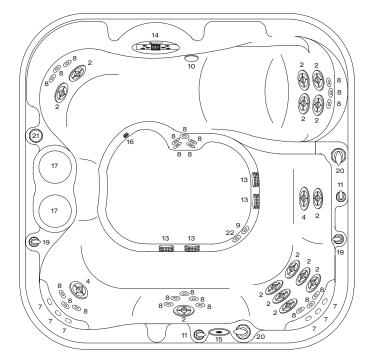


#	<b>Component Identification</b>	Qty.
2 4 7 8 9 10 11 13 14 15 16 17 19 20 21 22	Power Boost Jets Cyclo Swirl Jets Cascade Neck™ Jets HK40™ Jets Ozone Injector Fitting Light Air Controls Suction Fittings Bather's Control Panel Auxiliary Jet Control Panel Floor Drain Filter Canisters Cascade Neck Jet Valves Tri-Zone Controls	14 2 6 22 1 1 2 4 1 1 1 2 2 2 2 1 1
	Physical Specifications Dimensions Height Interior Depth Seating Positions Weight Dry/Lbs. Weight Full/Lbs. Water Capacity/Gallons Total Therapy Jets	<b>Size</b> 84" x 84" 35.5" 34" 6 740 3659 350 44

PAGE 34

## silver anniversary reward tri-zone control

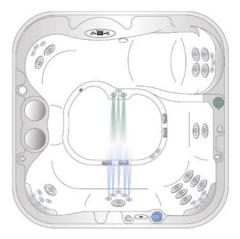

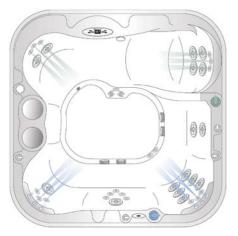

PAGE 35

ZONE 1 Lowerbody jets.\* ZONE 4 Lowerbody jets.\*





**ZONE 2** Upper-, mid- and lower-back jets.\*



ZONE 5

Upper-, mid- and lower-back jets.\*



**ZONE 3** Upper-back jets.\*



**ZONE 6** Upper-back jets.\*



\*Cascade Neck jets operate in every zone.

## the silver anniversary euphoria

Use the Bather's panel to set the temperature, select the filtration, heat modes, and turn on the jets and lights.



19)


14

15 Use the auxiliary Jet Control panel to turn on jets.

> This valve controls the water flow of the Cascade Neck jets.



Use the Tri-Zone control to select the jet zones.

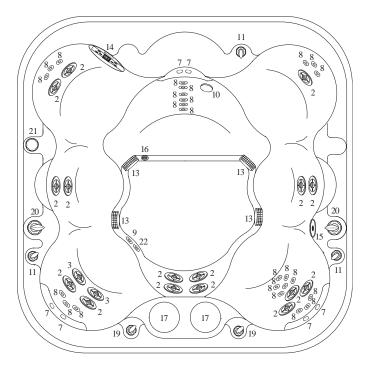

#	<b>Component Identification</b>	Qty.
2 3 7 8 9 10 11 13 14 15 16 17 19 20 21 22	Suction Fittings Bather's Control Panel Auxiliary Jet Control Panel Floor Drain Filter Canisters Cascade Neck Jet Valves	16 2 6 24 1 1 2 4 1 1 2 3 2 1 1
	Physical Specifications	Size
	Dimensions Height Interior Depth Seating Positions Weight Dry/Lbs. Weight Full/Lbs. Water Capacity/Gallons Total Therapy Jets	90" x 90" 35.5" 34" 7 825 4161 400 48

PAGE 36

## silver anniversary euphoria tri-zone control



**ZONE 1** Upper-, body jets.\*

ZONE 4 Upper-, body jets.\*







 ZONE 2 Upper- and mid-body jets.\*



**ZONE 5** Upper- and mid-body jets.\*



ZONE 3 Lowerbody jets.\*



ZONE 6 Lowerbody jets.\*



\*Cascade Neckjets operate in every zone.

PAGE 37