



880 SERIES

CAMEO™ | MAXXUS™ | OPTIMA™

OWNER'S MANUAL

6530-395U Rev. B

Sundance® Spas

Attention New Hot Tub Owner!

Congratulations on the purchase of your new Sundance® hot tub! The following is a list of automated functions performed by your hot tub. These functions are listed below in an attempt to suppress any operational concerns you may have during the first 24-hours of ownership! Also listed below are important maintenance recommendations you should observe on a regular basis to protect your new investment.

Automated Spa Operations

Your new hot tub is equipped with an automated “blow-out” cycle that clears all plumbing lines daily to promote maximum water sanitation. Each day at 12:00 PM (noon), pump 2, pump 3 (Maxxus Models Only) and the blower will automatically turn on for a period of one minute, then go off. Then pump 1 will turn on and run for one minute to complete the blow-out cycle. Be aware, the factory programmed blow-out cycle cannot be canceled or altered!

Maintain Healthy Spa Water

Always maintain your hot tub’s water chemistry within the following parameters as defined by the Association of Pool And Spa Professionals:

pH	7.4-7.6
Free chlorine	3.0-4.0 ppm
Free Bromine	2.0-4.0 ppm
Total Alkalinity	100-120 ppm
Calcium Hardness	150-250 ppm

Always maintain your spa filter as outlined below to ensure healthy spa water. Refer to pages 47-48 for additional information.

Required Filter Maintenance

Your new hot tub is equipped with an advanced MicroClean Ultra™ water filtration system that provides unsurpassed water quality! To ensure maximum water quality at all times, you should replace the filter cartridge every six months, or earlier as necessary. The filter cartridge is designed to be thrown away! Attempts to reuse the filter cartridge may result in the re-release of unwanted particles back into the hot tub. See pages 42-43 for detailed filter cartridge replacement instructions.

Required Water Replacement

You should replace the hot tub’s water every 3 to 6 months. The frequency depends on a number of variables including frequency of use, number of users, and attention paid to water quality maintenance. You will know it is time for a change when you cannot control sudsing and/or you can no longer get the normal feel or sparkle to the water, even though the key water balance measurements are all within the proper parameters. See pages 47-48 for additional information.

Table of Contents

1.0	Important Hot Tub Owner Information	1
2.0	Important Safety Instructions	2
3.0	Locating Your Sundance Hot Tub	8
3.1	Outdoor Location	8
3.2	Indoor Location	9
4.0	General Electrical Safety Instructions	10
5.0	Electrical Installation Instructions (240V Service)	10
6.0	Maxxus Power Requirements	14
7.0	Cameo/Optima Power Requirements	15
8.0	Hot Tub Fill Up Procedure	16
9.0	Hot Tub Features (All Models)	21
9.1	Main Control Panel Functions	21
9.2	LCD Screen Functions.....	22
10.0	Operating Instructions	26
10.1	View Button	26
10.2	Air Injection	26
10.3	Activate Jets Pump 1	26
10.4	Activate Jets Pump 2/Pump 3.....	26
10.5	Light Button.....	27
10.6	Selecting The Desired Massage Action	28
10.7	Adjusting Fluidix Reflex, ST And Intelli-Jets.....	28
10.8	Air Controls	29
10.9	Waterfall Control	29
10.10	Fragrance Dispenser	29
10.11	Optional Intelli-Sound™ Audio System	30
10.12	Maxxus Massage/Waterfall Selector Diagram	31
10.13	Maxxus Air Controls Diagram	32
10.14	Optima Massage/Waterfall Selector Diagram	33
10.15	Optima Air Controls Diagram	34
10.16	Cameo Massage/Waterfall Selector Diagram	35
10.17	Cameo Air Controls Diagram	36
11.0	Heating Modes	37
11.1	Standard Mode (Factory Default).....	37

11.2	Economy Mode	37
11.3	Selecting Standard or Economy Mode	37
11.4	Clean-Up “Blow-Out” Cycle.....	37
12.0	Programming Instructions.....	38
12.1	Programming Filter/Circulation Pump (Standard Mode).....	38
12.2	Programmable Heat Cycles (Economy Mode Only)	38
12.3	Adjusting Time of Day	40
12.4	Main Control Panel Lock.....	40
12.5	Temperature Setting Lock	41
12.6	Programming the Change Filter Reminder	41
13.0	Hot Tub Maintenance.....	42
13.1	Cleaning/Replacing the Filter Cartridge	42
13.2	Draining And Refilling.....	44
13.3	Cleaning The Hot Tub Interior.....	45
13.4	Pillow Care	45
13.5	Maintaining the Hot Tub Cabinet.....	46
13.6	Maintaining The Cover.....	46
13.7	Winterizing	46
13.8	Restarting Your Hot Tub in Cold Weather	47
14.0	Water Quality Maintenance	47
14.1	pH Control.....	48
14.2	Sanitizing	48
14.3	Other Additives.....	48
14.4	Ozone Water Maintenance System	48
14.5	Handrail Maintenance	49
15.0	Troubleshooting - Display Messages	49
16.0	Troubleshooting - Procedures.....	51
17.0	North American 60 Hz Maxxus Electrical Wiring Diagram	54
18.0	North American 60 Hz Cameo/Optima Electrical Wiring Diagram	55
19.0	Circuit Board Pin Assignments.....	56
20.0	Typical Hot Tub Wiring Diagrams A-B (North American 60 Hz Models Only).....	57

22.0	Optional Intelli-Sound™ Stereo Receiver Features.....	59
22.1	Intelli-Sound Stereo Receiver General Controls	59
22.2	Intelli-Sound Stereo Receiver Operation	60
22.3	Intelli-Sound Radio Operation	62
22.4	Intelli-Sound CD Player Operation	63
22.5	Intelli-Sound USB & Nand Operation	65
22.6	Intelli-Sound iPod Operation	67
22.7	Docking your iPod Music Player	68
22.8	Generic MP3 Player Operation	69
22.9	Intelli-Sound Stereo Troubleshooting	70
22.10	Intelli-Sound Stereo Specifications	70
22.11	Standard Wireless Remote Control Functions	71
22.12	Wireless Remote Battery Replacement Procedure	73

1.0 Important Hot Tub Owner Information

Your Sundance® hot tub is constructed to the highest standards and is capable of providing many years of trouble-free use. However, because heat retentive materials are utilized to insulate the hot tub for efficient operation, an uncovered hot tub surface and wall fittings directly exposed to sunlight and high temperatures for an extended period are subject to permanent damage or discoloration. Damage caused by exposing the hot tub to this abuse is not covered under warranty. We recommend that you always keep the hot tub full of water when it is exposed to direct sunlight and that you keep the Sundance insulating cover in place at all times when the hot tub is not in use. Read and carefully follow the requirements for your hot tub's support base found in the Section 3.0 titled, "Locating Your Sundance Hot Tub" (page 8) or as prescribed by your authorized Sundance Spas dealer.

Sundance hot tubs constantly strives to offer the finest hot tubs available, therefore, modifications and enhancements may be made which affect the specifications, illustrations and/or instructions contained herein.

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Rearrange or relocate the receiving antenna;
2. Increase the separation between the equipment and receiver;
3. Connect the equipment into an outlet on a circuit different from the circuit connected;
4. Consult the dealer or an experienced radio/TV technician for help. (Changes or modifications not expressly approved by the party responsible for FCC compliance could void the user's authority to operate this equipment).

2.0 Important Safety Instructions

READ AND FOLLOW ALL INSTRUCTIONS CAREFULLY

When installing and using this electrical equipment, basic safety precautions should always be followed, including:

1. **WARNING:** To reduce the risk of injury, do not permit children to use this product unless they are closely supervised at all times.
2. **WARNING:** A grounding wire connector is provided on this unit to connect a minimum No. 8 AWG (8.4 mm²) solid copper conductor between this unit and any metal equipment, metal enclosures of electrical equipment, metal water pipe, or conduit within 5 feet (1.5m) of the unit.
3. **DANGER:** Risk of Accidental Drowning. Extreme caution must be exercised to prevent unauthorized access by children. To avoid accidents, ensure that children cannot use this hot tub unless they are supervised at all times.
4. **WARNING:** Risk of Injury. The suction fittings in this spa are sized to match the specific water flow created by the pump. If it is necessary to replace the suction fittings or the pump, be sure that the flow rates are compatible. Because of the risk of injury,
 - Never operate or use the spa if the filter, filter lid, or skimmer assembly are broken or any part of the skimmer assembly is missing. Please contact your dealer or nearest service center for service.
 - Never replace a suction fitting with one rated less than the flow rate marked on the original suction fitting.
5. **DANGER:** Risk of Injury. The suction fittings in this hot tub are sized to match the specific water flow created by the pump. Should the need arise to replace the suction fittings or the pump, be sure that the flow rates are compatible. Never operate the hot tub if the suction fittings are broken or missing. Never replace a suction fitting with one rated less than the flow rate marked on the original suction fitting.
6. **DANGER:** Risk of Electric Shock. Install at least 5 feet (1.5m), from all metal surfaces. As an alternative, a hot tub may be installed within 5 feet of metal surfaces if each metal surface is permanently connected (bonded) by a minimum No. 8 AWG (8.4 mm²) solid copper conductor attached to the wire connector on the grounding lug, inside the equipment compartment on the equipment box.
7. **DANGER:** Risk of Electric Shock. Do not permit any electrical appliance, such as a lights, telephones, radios, televisions, etc. within 5 feet (1.5m) of a hot tub unless such appliances are built-in by the manufacturer.

8. **Electrical Supply:** The electrical supply for this product must include a suitably rated switch or circuit breaker to open all ungrounded supply conductors to comply with Section 422-20 of the National Electrical Code, ANSI/NFPA 70. The disconnect must be readily accessible and visible to the hot tub occupant but installed at least 5 feet (1.5m), from the hot tub water.
9. **WARNING:** To Reduce the Risk of Injury:
10. The water in the hot tub should never exceed 104°F (40°C). Water temperatures between 100°F (38°C) and 104°F (40°C) are considered safe for a healthy adult. Lower water temperatures are recommended for young children and when hot tub use may exceed 10 minutes.
11. Since excessive water temperatures have a high potential for causing fetal damage during the early months of pregnancy, pregnant or possibly pregnant women should limit hot tub water temperatures to 100°F (38°C). If pregnant, please consult your physician before using a hot tub.
12. Before entering the hot tub, the user should measure the water temperature with an accurate thermometer since the tolerance of water temperature-regulating devices may vary as much as +/- 5°F (2°C).
13. The use of alcohol, drugs, or medication before or during hot tub use may lead to unconsciousness with the possibility of drowning.
14. Persons suffering from obesity or a medical history of heart disease, low or high blood pressure, circulatory system problems, diabetes, infectious diseases or immune deficiency syndromes should consult a physician before using a hot tub. If you experience breathing difficulties in association with using or operating your hot tub, discontinue use and consult your physician.
15. Persons using medication should consult a physician before using a hot tub since some medication may induce drowsiness, while other medication may affect heart rate, blood pressure, and circulation.
16. Always shower before and after using your hot tub. To reduce the possibility of contracting a waterborne illness, always maintain water chemistry within the parameters listed on the inside cover of this manual. If you or other bathers experience such a condition, discontinue use and seek medical attention.

Important CSA Safety Instructions (Canada only)

When using this electrical equipment, basic safety precautions should always be followed, including the following:

1. **READ AND FOLLOW ALL INSTRUCTIONS.**
2. A green colored terminal or a terminal marked G, Gr, Ground, Grounding or the \oplus symbol* is located inside the supply terminal box or compartment. To reduce the risk of electric shock, this terminal must be connected to the grounding means provided in the electric supply service panel with a continuous copper wire equivalent in size to the circuit conductors that supply this equipment. *IEC Publication 417, Symbol 5019.
3. At least two lugs marked "Bonding Lugs" are provided on the external surface or on the inside of the supply terminal box/ compartment. To reduce the risk of electric shock, connect the local common bonding grid in the area of the hot tub to these terminals with an insulated or bare copper conductor not smaller than No. 6 AWG (10 mm²).
4. All field-installed metal components such as rails, ladders, drains or other similar hardware within 10 feet (3m) of the hot tub shall be bonded to the equipment grounding buss with copper conductors not smaller than No. 6 AWG (10 mm²).
5. **SAVE THESE INSTRUCTIONS.**
 - **WARNING:** Children should not use hot tubs without adult supervision.
 - **WARNING:** Do not use hot tubs unless all suction guards are installed to prevent body and hair entrapment.
 - **WARNING:** People with infectious diseases should not use a hot tub.
 - **WARNING:** To avoid injury, exercise care when entering or exiting the hot tub.
 - **WARNING:** Do not use drugs or alcohol before or during the use of a hot tub to avoid unconsciousness and possible drowning.
 - **WARNING:** Pregnant or possibly pregnant women should consult a physician before using a hot tub.

- **WARNING:** Water temperature in excess of 40°C (104°F) may be injurious to your health.
- **WARNING:** Before entering the hot tub, measure the water temperature with an accurate thermometer.
- **WARNING:** Do not use a hot tub immediately following strenuous exercise.
- **WARNING:** Prolonged immersion in a hot tub may be injurious to your health.
- **WARNING:** Do not permit electric appliances (such as lights, telephones, radios, televisions, etc.) within 5 feet (1.5m) of this hot tub unless such appliances are built-in by the manufacturer.
- **CAUTION:** Maintain water chemistry in accordance with manufacturer's instructions.
- **WARNING:** The use of alcohol or drugs can greatly increase the risk of fatal hyperthermia in hot tubs.

SAVE THESE INSTRUCTIONS HYPERTHERMIA

Prolonged immersion in hot water may induce hyperthermia. A description of the causes, symptoms, and effects of hyperthermia are as follows:

Hyperthermia occurs when the internal temperature of the body reaches a level several degrees above the normal body temperature of 98.6°F (37°C). The symptoms of hyperthermia include drowsiness, lethargy, and an increase in the internal temperature of the body. The effects of hyperthermia include:

- Unawareness of impending hazard;
- Failure to perceive heat;
- Failure to recognize the need to exit hot tub;
- Physical inability to exit hot tub;
- Fetal damage in pregnant women; and
- Unconsciousness and danger of drowning.

A warning sign is provided in your warranty packet. Please install it at a location near your hot tub, where it is visible to the user of the hot tub. For additional or replacement signs please contact your local Sundance Hot tubs dealer and reference item number #6530-082.

CAUTIONS:

1. Persons suffering from heart disease, diabetes, high or low blood pressure, and any condition requiring medical treatment, pregnant women, the elderly, or infants should consult with a physician before using a hot tub.
2. The Consumer Products Safety Commission has stated that the water temperature in a hot tub should not exceed 104°F (40°C). Immersion in water in excess of 104°F (40°C) can be hazardous to your health.
3. Observe a reasonable time limit when using the hot tub. Long exposures at higher temperatures can cause high body temperature. Symptoms may include dizziness, nausea, fainting, drowsiness, and reduced awareness. These effects could possibly result in drowning.
4. Do not use the hot tub under the influence of alcohol, narcotics, or other drugs. Use of the hot tub under these conditions may lead to serious consequences.
5. Always test the hot tub water temperature before entering the hot tub. Enter and exit the hot tub slowly. Wet surfaces can be very slippery.
6. Never bring any electrical appliances into or near the hot tub. Never operate any electrical appliances from inside the hot tub or when you are wet unless such appliances are built-in by the manufacturer.
7. Proper chemical maintenance of hot tub water is necessary to maintain safe water and prevent possible damage to hot tub components.
8. Use the straps and clip tie downs to secure the cover when not in use. This will help to discourage unsupervised children from entering the hot tub and keep the hot tub cover secure in high-wind conditions. There is no representation that the cover, clip tie-downs, or actual locks will prevent access to the hot tub.

Hot Tub Safety Literature

To ensure you have a safe and enjoyable hot tub experience, learn all you can about hot tub safety and emergency procedures. Especially useful are the brochures listed below.

- Children Aren't Waterproof
- Pool and Spa Emergency Procedures For Infants and Children
- Layers of Protection
- The Sensible Way to Enjoy Your Spa or Hot Tub

The Association of Pool and Spa Professionals publishes these brochures. You can acquire a brochure in one of the ways in the list below.

- Ask your hot tub dealer (they may have copies)
- Go to <http://www.apsp.org>
- Conduct your own search on the internet
- Write to the following address:
The Association of Pool and Spa Professionals
2111 Eisenhower Avenue
Alexandria VA 22314
703.838.0083

This spa is not intended nor designed to be used in a commercial or public application. The spa buyer shall determine whether there are any code restrictions on the use or installation of this spa since local code requirements vary from one locality to another.

3.0 Locating Your Sundance Hot Tub

IMPORTANT: Because of the combined weight of the spa, water and users, it is extremely important that the base upon which the spa rests be smooth, flat, level and capable of uniformly supporting this weight, without shifting or settling, for the entire time the spa is in place. If the spa is placed on a surface which does not meet these requirements, damage to the skirt and/or the spa shell may result. Damage caused by improper support is not covered under warranty. It is the responsibility of the spa owner to assure the integrity of the support over time. We recommend a poured, reinforced concrete slab with a minimum thickness of 4 inches (10 cm). Wood decking is also acceptable provided it is constructed so that it meets the requirements outlined above.

The spa must be installed in such a manner as to provide drainage away from it. Placing the spa in a depression without provisions for proper drainage could allow rain, overflow and other casual water to flood the equipment and create a wet condition in which it would sit in. For spas which will be recessed into a floor or deck, install so as to permit access to the equipment, either from above or below, for servicing. Make certain that there are no obstructions which would prevent removal of all side cabinet panels and access to components, especially on the side with the equipment bay doors.

3.1 Outdoor Location

In selecting the ideal outdoor location for your hot tub, we suggest that you take into consideration the following:

- The proximity to changing area and shelter (especially in regions subject to cold weather).
- The pathway to and from your hot tub (this should be free of debris so that dirt and leaves are not easily tracked into the hot tub).
- The closeness to trees and shrubbery (remember that leaves and birds could create extra work in keeping the hot tub clean).
- A sheltered environment (less wind and weather exposure can result in lowered operation and maintenance costs).
- The overall enhancement of your environment. It is preferable not to place the hot tub under an ungluttered roof overhang since run-off water will shorten the life expectancy of the hot tub cover.

3.2 Indoor Location

For indoor installations many factors need to be considered before installing a spa indoors:

- **PROPER FOUNDATION:** Consult a Structural Engineer when considering a foundation that will adequately support the spa the entire time it is in place. Proper support is critical especially if the spa is to rest on a second story or higher. For spas that are to rest on balconies, roofs or other platforms not specifically tied into the main structural support, you should consult a professional Structural Engineer with experience in this type of application.
- **PROPER DRAINAGE:** It is extremely important to have in place measures to sufficiently handle excessive water spillage. Be sure the flooring in which the spa rests on has adequate drainage and can handle draining of the entire contents of the spa. Be sure to make provisions for ceilings or any other structures that may be below the spas installation. Areas around your spa can become wet or moist so all flooring and subsequent furniture, walls and adjacent structures should be able to withstand or resist water and moisture.
- **PROPER VENTILATION:** Proper ventilation should be discussed with an Engineer or authority competent enough to understand the necessary provisions needed to vent moist or heated air and air associated with chemical odors outdoors. When the spa is in use considerable amounts of moisture will escape potentially causing mold and mildew, over time this can damage certain surfaces and or surroundings.
- **SUFFICIENT ACCESS:** In the unlikely event that you should ever need to access or gain entry to any portion of the spa for servicing, it is highly recommended that you plan your indoor installation to provide full access to the entire spa.
- **WARRANTY:** Damage caused by not following these guidelines or any improper installation not in accordance with local codes or authorities is not covered under the spas warranty. Please consult your local state or city building ordinances.



WARNING: In addition to maintenance of filters and water chemistry, proper ventilation is recommended to reduce the risk of exposure to viruses and bacteria that could be present in the air or water. Consult a licensed architect or building contractor to determine your specific needs if installing your hot tub indoors.

4.0 General Electrical Safety Instructions

Your new Sundance® hot tub is equipped with the “state-of-the-art” Sentry™ equipment system. It contains the most advanced safety and self-protective equipment in the industry. Nonetheless, this hot tub must be installed properly to ensure dependable usage. Please contact your local Sundance Spas dealer or local building department should you have any questions regarding your installation.

Proper grounding is extremely important. Sundance hot tubs are equipped with a current collector system. A pressure wire connector is provided on the surface of the control box, located inside the equipment door (Figure C, page 13) to permit connection of a bonding wire between this point and any ground metal equipment, metal water pipe or conduit within 5 feet (1.5m) of the hot tub, or copper clad grounding rod buried within 5 feet (1.5m) of the hot tub. Bonding wire must be at least No. 8 AWG (8.4 mm²) solid copper wire. This is a most important safety assurance feature.

Before installing your hot tub, check with your local building department to ensure installation conforms to local building codes.


5.0 Electrical Installation Instructions (240V Service)

IMPORTANT NOTICE: The electrical wiring of this hot tub must meet the requirements of the National Electrical Code (NEC) and any applicable state or local codes. The electrical circuit must be installed by a qualified electrician and approved by a local building/electrical inspection authority.

1. This hot tub must be permanently connected (hard-wired) to the power supply. **No plug-in connections or extension cords are to be used in conjunction with the operation of this hot tub.** Supplying power to the hot tub which is not in accordance with these instructions will void both the independent testing agency listing and the manufacturer’s warranty.
2. The power supplied to this hot tub must be a dedicated circuit with no other appliances or lights sharing the power provided by the circuit.
3. To determine the current, voltage and wire size required, refer to Section 6.0-7.0 (pages 14-15) for your specific hot tub model.

- Wire size must be appropriate per NEC and/or local codes.
 - We recommend type THHN wire.
 - All wiring must be copper to ensure proper connections. Do not use aluminum wire.
 - When using wire larger than #6 (10 mm²), add a junction box near the hot tub and reduce to short lengths of #8 (8.4 mm²) wire to connect to the hot tub.
4. The electrical supply for this product must include a suitably rated switch or circuit breaker to open all ungrounded supply conductors to comply with Section 422-20 of the National Electrical Code, ANSI/NFPA 70. The disconnecting means must be readily accessible to the hot tub's occupant but installed at least 5 feet (1.5m) from hot tub water.
 5. The electrical circuit supplied for the hot tub must include a suitable ground fault circuit interrupter (GFCI) as required by NEC Article 680-42.
 6. To gain access to the hot tub's power terminal block, remove the four screws securing the center cabinet panel on the side of the hot tub under the controls. Then remove the four control box door screws and door (Figure C, page 13).
 7. Select the power supply entrance you want to use (Figures A-B, page 12) and remove the short cabinet panel from the front of the hot tub, then feed cable through the large opening provided on the bottom of the control box.
 8. Connect wires, color to color, on terminal blocks TB1 and TB3 (Figure D, page 13). **TIGHTEN SECURELY!** All wires must be hooked up securely or damage could result.
 9. Install control box door and reinstall the cabinet side panels.


Figure A (Maxxus Equipment Area)

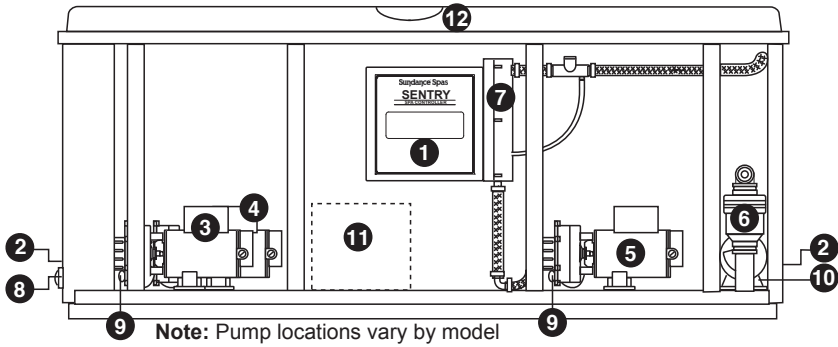

Note: Pump locations vary by model

- | | |
|-----------------------------|---|
| 1. Sentry Control Box | 8. Hot Tub Drain (Removable External Drain Cap) |
| 2. Power Supply Entrance(s) | 9. Pump Drain Plug(s) |
| 3. Jets Pump #1 | 10. Filter/Circulation Pump |
| 4. Jets Pump #2 | 11. Optional Subwoofer Behind Bulkhead (Models with Audio Option Only.) |
| 5. Jets Pump #3 | 12. Control Panel |
| 6. Blower | |
| 7. Heater | |


Figure B (Equipment Area for All Models Except Maxxus)

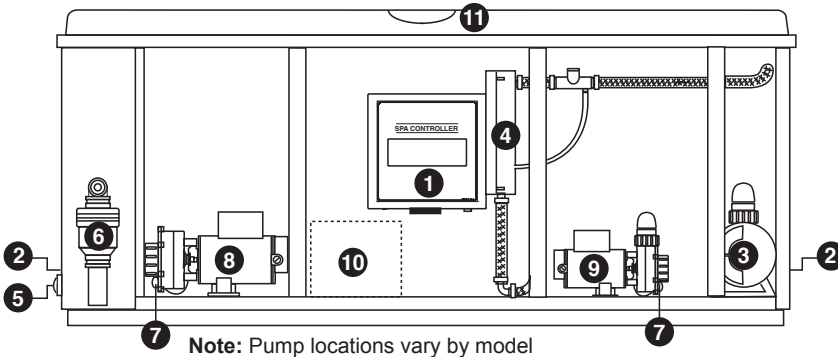

Note: Pump locations vary by model


- | | |
|---|---|
| 1. Sentry Control Box | 7. Pump Drain Plug(s) |
| 2. Power Supply Entrance(s) | 8. Jets Pump #2 |
| 3. Jets Pump #1 | 9. Filter/Circulation Pump |
| 4. Heater | 10. Optional Subwoofer Behind Bulkhead (Models with Audio Option Only.) |
| 5. Hot Tub Drain (Removable External Drain Cap) | 11. Control Panel |
| 6. Air Blower | |

Figure C
Sentry Control Box

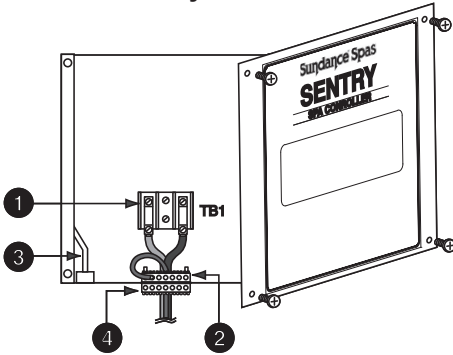

1. Terminal Block
2. Bonding Lug
3. Receptacle for Optional
Ozone Purification System
4. Grounding Terminal

Figure D
Terminal Block 240V
Wire Connection

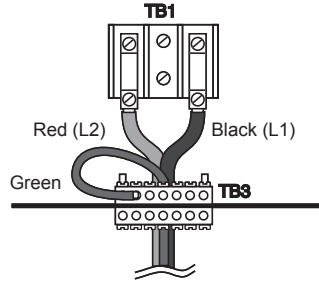

6.0 Maxxus Power Requirements

Sundance® hot tubs are designed to provide optimum performance and flexibility of use when connected to their maximum electrical service. However, they are shipped factory configured for their most common preferred electrical connection as follows:

- North American 60 Hz Model: 240 VAC/60A

If you prefer, a qualified technician can perform a minor circuit board modification that allows the hot tub to operate on a different electrical service (see table below).

North American 60 Hz Maxxus		
	<u>240V/50A*</u>	<u>240V/60A**</u>
Voltage	240 VAC	240 VAC
Max. Current Draw	38A	48A
Number of Wires	3	3
Circuit Breaker (2-Pole)	50A*	60A**

* In this configuration, the heater will not operate while any two jets pumps are running.

** In this configuration the heater will operate while any two jets pumps and the blower are running but will not operate when all three jets pumps are running.

7.0 Cameo/Optima Power Requirements

Sundance hot tubs are designed to provide optimum performance and flexibility of use when connected to their maximum electrical service. However, they are shipped factory configured for their most common preferred electrical connection as follows:

- All North American 60 Hz Models: 240 VAC/50A**

If you prefer, a qualified technician can perform a minor circuit board modification that allows the hot tub to operate on a different electrical service (see table below).

North American 60 Hz Cameo/Optima			
	<u>240V/40A*</u>	<u>240V/50A**</u>	<u>240V/60A***</u>
Voltage	240 VAC	240 VAC	240 VAC
Max. Current Draw	26A	40A	48A
Number of Wires	3	3	3
Circuit Breaker (2-Pole)	40A*	50A**	60A***
* In this configuration, the heater <u>will not operate</u> while either jets pump is running or when the blower is running.			
** In this configuration, the heater <u>will not operate</u> while both jet pumps are running.			
*** In this configuration the heater <u>will operate while</u> both jets pumps and the blower are running.			

8.0 Hot Tub Fill Up Procedure

FOR BEST RESULTS, READ EACH STEP IN ITS ENTIRETY BEFORE PROCEEDING WITH THAT STEP.

1. Prepare The Hot Tub For Filling

- Clear all debris from the hot tub. (Although the hot tub shell has been polished at the factory, you may want to treat it with a specially formulated hot tub cleaner.) Consult your dealer for additional information prior to filling hot tub.
- Remove filter lid (Figure F-H, pages 23-25), then remove filter cartridge from filter bucket as illustrated in Section 13.1.

2. Fill Hot Tub

- Place the end of your garden hose into the empty filter bucket.



CAUTION: Never fill with water from a water softener. If your water is extremely “hard”, it is preferable to fill half-way with hard water and the rest of the way with softened water. Or, you may fill entirely with hard water if you use a special water additive available from your Sundance Spas dealer.

- Fill hot tub with clean tap water from garden hose until water covers all jets but does not touch the bottom of the lowest headrest (DO NOT OVERFILL!).



IMPORTANT: Always fill your hot tub through the filter bucket after draining. Failure to do so may cause air to be trapped in either pump, preventing the pump from circulating water. Remove the hose and replace the filter cartridge as illustrated in Section 13.1 (pages 43).

3. Turn On Power

Turn on power to hot tub at the home’s circuit breaker to start boot up sequence. The heater and filter/circulation pump will automatically activate. If the control panel LCD flashes water temperature and “COOL” or “ICE”, this is normal. Refer to page 50 for additional information.

4. **Activate Jets Pumps**

Turn on all jet(s) pumps and blower to ensure proper mixing when adding start up chemical in step 5.



5. **Add Start-Up Chemicals**

Add the hot tub water chemicals as recommended by your Sundance Spas dealer. See Section titled “Water Quality Maintenance” (page 47) for general guidance.

6. **Establish A Stable Sanitizer Reading**

Establish a stable sanitizer reading between 3.0-4.0 ppm chlorine or 2.0-4.0 ppm bromine. To ensure healthy water conditions, always maintain a constant sanitizer reading within the levels recommended by the Association of Pool And Spa Professionals printed on the inside cover of this manual. If sanitizer levels cannot be stabilized, perform the decontamination procedure steps 9-15 on the following page.

Note: The “decontamination procedure” steps 9-15 should also be used after the hot tub has been “Winterized” (Section 13.7) or has been sitting without power for an extended period.

7. **Set Hot Tub To Heat**

To warm hot tub water to a comfortable temperature, follow these steps:



- The LCD display on the control panel displays the actual temperature of the hot tub water. Press either the COOLER (Down) or WARMER (Up) button once to display the “set” temperature for 5 seconds. If you want the water to heat to a different temperature, simply press COOLER or WARMER within 5 seconds. The set temperature increases or decreases by one degree each time either button is pressed.
- The heater will turn off when the temperature corresponding to the thermostat setting is achieved.

Important Heater Details:

- The maximum temperature for which the hot tub can be set is 104°F (40°C) and the minimum is 80°F (27°C).
- For Cameo and Optima hot tubs powered with a 40 amp service, turn off jets pump #1 and jets pump #2 to operate heater.
- Setting the thermostat at maximum will not accelerate the heating process. This will only result in a higher ultimate temperature.
- The heater operates until the water reaches the programmed “set temperature”, then turns off. The heater will reactivate after the water cools to approximately 1° below the “set temperature.”

8. Place Cover On Hot Tub

- Keeping the insulating cover in place anytime the hot tub is not in use will reduce the time required for heating, thereby minimizing operating costs.
- The time required for initial heat-up will vary depending on the starting water temperature.



DANGER: Risk of injury, always check water temperature carefully before entering hot tub!

Decontamination Procedure (Steps 9-15)

Steps 9-15 below are only required when sanitizer levels are unstable after performing steps 1-6 above. Disregard steps 9-15 below if sanitizer levels remain stable at 3.0-4.0 ppm chlorine or 2.0-4.0 ppm bromine after performing steps 1-6 above.

9. Add 2.5 ounces of sodium dichlor for every 100 gallons of water. Refer to the table (page 19) for approximate water fill capacity by model.



CAUTION: Never add chlorine tablets (trichlor) to your hot tub for any reason! This chemical may damage components within your hot tub and void the manufacturer warranty.

Water Fill Capacity by Model

Model	Approximate Fill Capacity	Sodium Dichlor
Cameo	459 US Gallons (1,738 Liters).....	11.5 oz
Optima	540 US Gallons (2,044 Liters).....	13.5 oz
Maxxus	670 US Gallons (2,536 Liters).....	17.0 oz

10. Leave hot tub cover open during this step to allow excessive chemical vapors to exit hot tub, protecting pillows and plastic knobs from chemical attack. If hot tub is indoors, open doors and windows for proper ventilation. Turn on all hot tub jets pumps for one hour, open all air controls, turn on the blower, and place all massage selector knob(s) in their center “combo” position as shown (right).



Note: You will need to press the jets pump button(s) and blower button every 20 minutes since these functions have an automatic 20 minute time-out function that turns them off.



CAUTION: Never leave your hot tub unattended for any reason while the cover is open and accessible to small children and animals!

11. Turn off power to the hot tub at the circuit breaker, then drain tub as outlined in Section 13.2 (page 44).
12. Refill hot tub with clean tap water from garden hose until water covers all jets but does not touch the bottom of the lowest headrest (DO NOT OVERFILL!).



CAUTION: Never fill with water from a water softener. If your water is extremely “hard”, it is preferable to fill half-way with hard water and the rest of the way with softened water. Or, you may fill entirely with hard water if you use a special water additive available from your Sundance Spas dealer.

13. Consult your authorized Sundance Spas dealer for chemical recommendations, then add chemicals to hot tub water to achieve a constant sanitizer reading within the levels recommended by the Association of Pool And Spa Professionals printed on the inside cover of this manual.

14. Turn on all jet pumps and the blower when adding chemicals to ensure proper mixing and leave your hot tub cover open until the sanitizer level falls below 4.0 ppm to protect pillows and plastic knobs from chemical attack.



CAUTION: Never leave your hot tub unattended for any reason while the cover is open and accessible to small children and animals!



CAUTION: To prevent the unlikely possibility of contracting a waterborne illness, maintain water chemistry within step 6 parameters. If you or other bathers experience such a condition, discontinue use and seek medical attention.

15. Establish a sanitizer reading between 3.0-4.0 ppm chlorine or 2.0-4.0 ppm bromine, then allow the hot tub to set undisturbed for 8 hours. Retest water after 8 hours to determine if sanitizer levels are stable. If sanitizer levels are stable, your hot tub is ready for use. To ensure healthy water conditions, always maintain a constant sanitizer reading within the levels recommended by the Association of Pool And Spa Professionals printed on the inside cover of this manual. If sanitizer levels are not stable at this time, it will be necessary to repeat this procedure in its entirety (steps 1-15) until stable sanitizer readings are achieved.
16. After adequate sanitizer levels are achieved, close all spa air controls by rotating them clockwise to maximize heat retention when spa is not in use.

9.0 Hot Tub Features (All Models)

9.1 Main Control Panel Functions

- A. **Select Button:** Scrolls menu through filter cycle programming features. Manually activates the circulation pump when it is in an off state for a 1 hour duration.

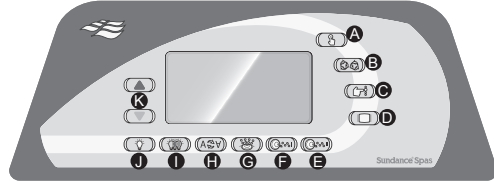







Figure E
2 or 3 Pump Spa Control Panel


- B. **Cycle Button:** Accesses filter cycle program mode and advances display to next cycle.
- C. **Mode Button:** Switches between standard and economy modes.
- D. **Display Button:** Displays time of day and initiates time setting and locking functions.
- E. **Jets 2 Button:** Controls jets pump #2 (and Maxxus Jets pump #3).
- F. **Jets 1 Button:** Controls jets pump #1.
- G. **Blower Button:** Controls air blower.
- H. **Invert Button:** Inverts the main 4-digit LCD display.
- I. **Light Mode Button:** Selects one of 5 color modes for waterfall, footwell and air control lights.
- J. **Light Button:** Turns waterfall, footwell air control lights on in unison. Press once for high intensity; press a second time for medium intensity; press a third time for low intensity; press a fourth time to turn off. The displayed color is changed using the light mode button.
- K. **Warmer () and Cooler () Buttons:** These buttons display and increase or decrease temperature setting and other programming features.


9.2 LCD Screen Functions

 = Lock: Indicates panel, set temperature, or filter cycle programming is locked.


 = Heat: Indicates heater is on.


 = Ozone: Indicates optional CD ozonator is on (page 48).


 = Adjust Filter Cycle: Indicates filter cycle programming feature is accessed.

 = Filter Cycle Number: Indicates which programmed filter cycle is running.

 = Filter Cycle: Indicates programmed filter cycle is running.

 = Filter Cycle Start Time: Indicates filter cycle start time programming is accessed.

 = Filter Cycle Duration: Indicates filter cycle duration programming is accessed.

 = Set Temperature: Indicates current set temperature is displayed.


 = Set Time: Indicates current time is displayed.

 = Filter Annunciator: Indicates filter cleaning and/or replacement is required.

 = Light: Indicates light is on.

 = Blower: Indicates blower is on.

 = Jets 1: Indicates jets pump 1 is on.

 = Jets 2: Indicates jets pump 2 is on (also shown for Maxxus Pump 3).

STANDARD = Mode: Indicates selected filter mode.

Note: No icon means Economy mode is selected.


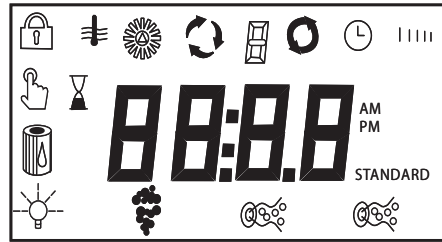



Figure F (Maxxus Hot Tub Features)

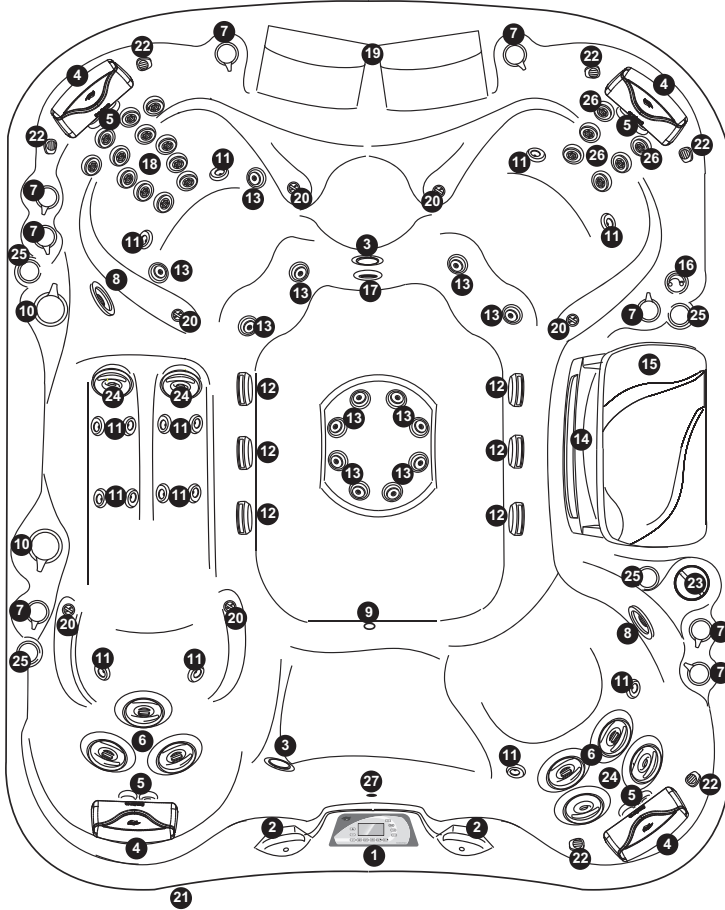

- | | |
|--|---|
| 1. Main Control Panel | cleaning for optimum performance) |
| 2. Handrails with LED Light (2 ea.) | 16. AquaTerrace Waterfall Control Valve |
| 3. Lights (2 ea.) | 17. AquaTerrace Waterfall Filtration Return |
| 4. Pillows (4 ea.) | 18. Fluidix ST Jets (12 ea.) |
| 5. Fluidix Nex Jets (8 ea.) | 19. AquaTerrace Waterfalls (2 ea.) |
| 6. Fluidix Intelli-Jets (5 ea.) | 20. Pulsator Jets (6 ea.) |
| 7. Air Controls with LED Light (8 ea.) | 21. Optional Audio System Receiver |
| 8. Whirlpool Jets (2 ea.) | 22. Optional Audio System Speakers (6 ea.) |
| 9. Gravity Drain | 23. Sunscents™ Dispenser |
| 10. Massage Selectors (2 ea.) | 24. Vortex Jets (4 ea.) |
| 11. Air Injectors (16 ea.) | 25. Integrated cupholders (4 ea.) |
| 12. Footwell Suction Covers (6 ea.) | 26. Fluidix Reflex Jets (6 ea.) |
| 13. Accu-Pressure Jets (14 ea.) | 27. Optional Audio System IR Sensor |
| 14. Weir Gate/Skimmer | |
| 15. Filter Lid (The filter cartridge and suction fitting/filter are located under the filter lid. The suction fitting filter requires periodic | |

Spa features subject to change without notice.


Figure G (Optima Hot Tub Features)

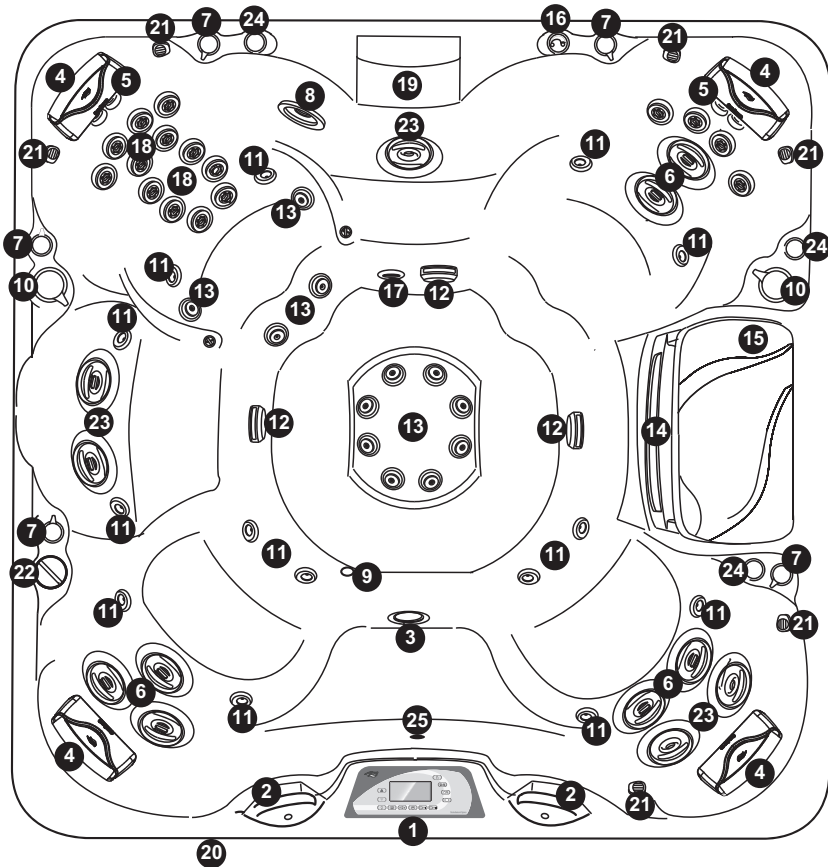

- | | |
|--|--|
| <ol style="list-style-type: none"> 1. Main Control Panel 2. Handrails with LED Light (2 ea.) 3. Light 4. Pillows (4 ea.) 5. Fluidix Nex (4 ea.) 6. Fluidix Intelli-Jets (7 ea.) 7. Air Controls with LED Light (5 ea.) 8. Whirlpool Jets (1 ea.) 9. Gravity Drain 10. Massage Selectors (2 ea.) 11. Air Injectors (14 ea.) 12. Footwell Suction Covers (3 ea.) 13. Accu-Pressure Jets (12 ea.) 14. Weir Gate/Skimmer 15. Filter Lid (The filter cartridge and suction fitting/filter are located under the filter lid. The suction fitting filter requires periodic | <ol style="list-style-type: none"> cleaning for optimum performance) 16. AquaTerrace Waterfall Control Valve 17. AquaTerrace Waterfall Filtration Return 18. Fluidix ST Jets (12 ea.) 19. AquaTerrace Waterfall 20. Optional Audio System Receiver 21. Optional Audio System Speakers (6 ea.) 22. Sunscents Dispenser 23. Vortex Jets (5 ea.) 24. Integrated Cupholders (3 ea.) 25. Optional Audio System IR Sensor |
|--|--|

Spa features subject to change without notice.

Figure H (Cameo Hot Tub Features)

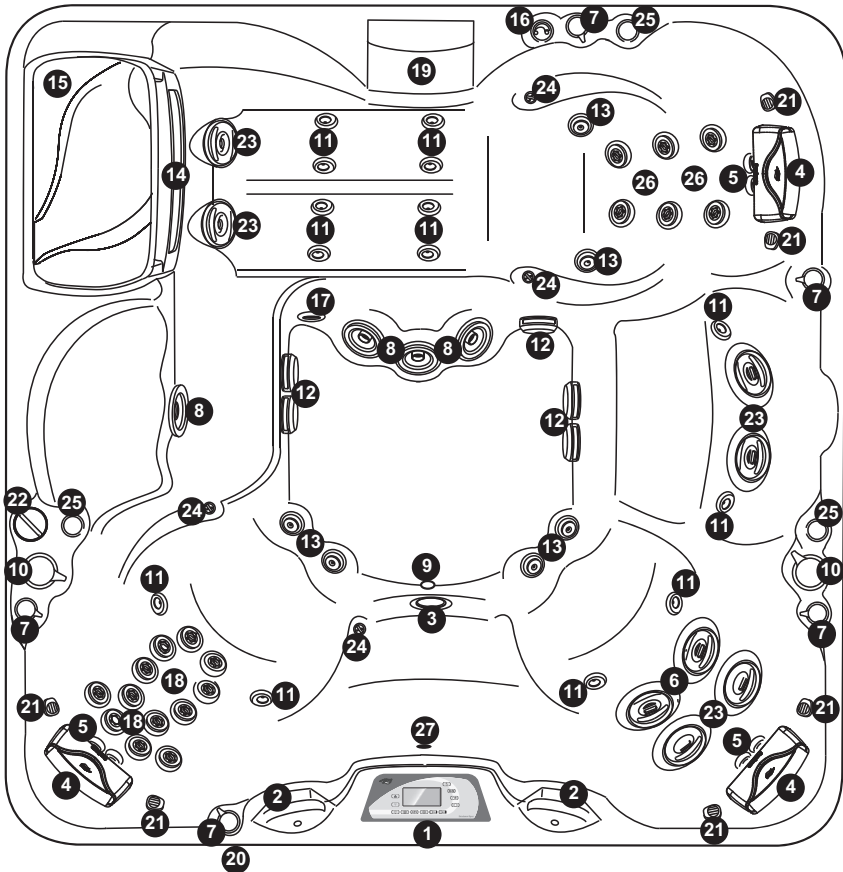

- | | |
|--|---|
| 1. Control Panel | cleaning for optimum performance) |
| 2. Handrails with LED Light (2 ea.) | 16. AquaTerrace Waterfall Control Valve |
| 3. Light | 17. AquaTerrace Waterfall Filtration Return |
| 4. Pillows (3 ea.) | 18. Fluidix ST Jets (12 ea.) |
| 5. Fluidix Nex Jets (6 ea.) | 19. AquaTerrace Waterfall |
| 6. Fluidix Intelli-Jets (2 ea.) | 20. Optional Audio System Receiver |
| 7. Air Controls with LED Light (5 ea.) | 21. Optional Audio System Speakers (6 ea.) |
| 8. Whirlpool Jets (4 ea.) | 22. Sunscents Dispenser |
| 9. Gravity Drain | 23. Vortex Jets (6 ea.) |
| 10. Massage Selectors (2 ea.) | 24. Pulsator Jets (4 ea.) |
| 11. Air Injectors (14 ea.) | 25. Integrated Cupholders (3 ea.) |
| 12. Footwell Suction Covers (5 ea.) | 26. Fluidix Reflex Jets (6 ea.) |
| 13. Accu-Pressure Jets (6 ea.) | 27. Optional Audio System IR Sensor |
| 14. Weir Gate/Skimmer | |
| 15. Filter Lid (The filter cartridge and suction fitting/filter are located under the filter lid. The suction fitting filter requires periodic | |

Spa features subject to change without notice.

10.0 Operating Instructions

Your Sundance® hot tub has a touch-sensitive control panel, massage selector valves and air control knobs located on the top rim of the hot tub (Figures F-H, pages 23-25). These controls let you operate many of the special functions of your Sundance® hot tub. By familiarizing yourself with the following information, you will be able to gain the full benefit afforded by the various functions of your hot tub.

 
10.1 View Button

Pressing this button inverts the main four-digit display on the Command Center's LCD screen to allow easy reading from either inside or outside the hot tub.



10.2 Air Injection

When the **AIR** button is pressed, the air blower forces air through the injectors located in the seats and footwell. The bubbles symbol on the button appears on the LCD whenever the air blower is on. An electronic timer automatically turns the air blower off 20 minutes after it was turned on.

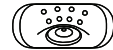

Note: The air blower automatically activates for 1 minute at the start of the clean-up cycle at 12:00 (Noon). This clears the lines of the air injector system to help ensure that all water is exposed to sanitizer. This cycle is non-programmable.

10.3 Activate Jets Pump 1

This button controls jets pump #1. Press once to turn on jets pump #1. Press a second time to turn pump off.



10.4 Activate Jets Pump 2/Pump 3

On two pump models, this button controls jets pump #2. Press once to turn on jets pump #2. Press a second time to turn pump off.



On three pump Maxxus models, this button controls both jets pump #2 and jets pump #3 in the following sequence:




1. Press once to turn on jets pump #2.
2. Press a second time to turn on jets pump #3.
3. Press a third time to turn off jets pump #2.
4. Press a fourth time to turn off jets pump #3.

Note: Anytime a jet pump has been manually activated, it will automatically turn off after approximately 20 minutes. If at this time you desire more jet operation you may simply turn the pump(s) back on.

10.5 Light Button


Pressing this button activates the footwell, waterfall and air control LED lights in sequence as follows: High - Medium - Low - Off.

Note: Lights automatically turn off after 2 hours.

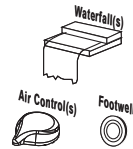

Anytime the light system has been manually activated, it will automatically turn off after approximately 2 hours. If at this time you desire more light operation, simply turn the light system back on.

This button offers five light modes for your enjoyment. Press the LIGHT MODE button to select our favorite lighting effect as follows:

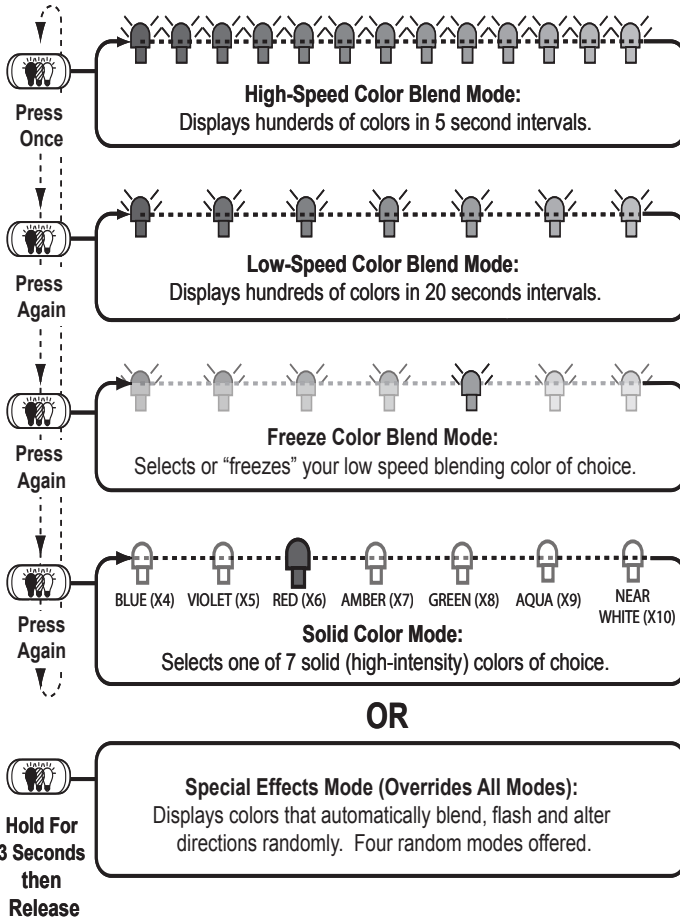

10.6 Selecting The Desired Massage Action

Your Sundance® hot tub is equipped to allow you to customize the massage action you desire. Each model incorporates a massage selector(s) that allows you to customize the massage and performance by diverting water between various jet systems. Simply turn massage selector to position A (Combo), B, or C to divert water pressure to various jet groups.



Note: This valve is designed to operate in positions A (Combo), B, and C for optimum performance. It is considered normal for sound levels within the valve to vary between positions due to the large amounts of water flowing through it. For optimum filtration benefits, leave the valve in position A when hot tub is covered. Select position B or C for maximum jet performance during hot tub use.

10.7 Adjusting Fluidix Reflex, Nex, ST And Intelli-Jets

These jets in your new hot tub offer the advantage of no moving parts and zero maintenance. They can also be adjusted for a high and low impact massage, providing the ultimate massage!


To Adjust Jets

1. Fluidix Nex/Intelli-Jets and Reflex Jets only: Turn outer dial (A) clockwise to increase water volume. Turn outer dial counterclockwise to decrease water volume or to shut jet off.
2. For a high impact massage, turn corresponding air control knob clockwise. For the Fluidix ST jet, this will create a straight water flow. For low impact massage, turn corresponding air control knob counterclockwise. For the Fluidix ST jet, this will create an oscillating flow. Refer to Sections 10.12-10.17 (pages 31-36) for specific operation details. The included tool (shown) allows you to position the jet nozzle angle to your liking. This tool can also be used to aid in the opening or closing of the nozzle on Fluidix Reflex jets.


Note: Always keep at least 6 adjustable jets open at all times on each jet system.



Fluidix Intelli-Jet Shown

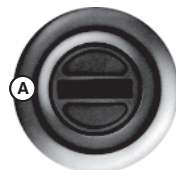

Fluidix Reflex Jet

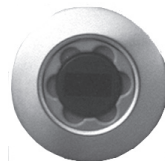

Fluidix ST Jet

10.8 Air Controls

Each jet system has its own air control. These controls allow you to regulate the amount of air which is mixed with the water entering through the jets. Clockwise rotation adds more air and counterclockwise rotation reduces air flow.




Note: To minimize heat loss, close all air controls when spa is not in use. Certain jets may not draw air while either jets pump is running in low speed; this is considered normal.

10.9 Waterfall Control

Turn waterfall control valve counterclockwise to increase waterfall(s) output. Turn control valve clockwise to decrease or turn off waterfall(s) output.

Note: It takes 2 full revolutions to change the waterfall from a full off to a full on flow rate.

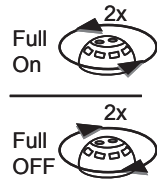

10.10 Fragrance Dispenser

On the rim of your hot tub is a screw-off cap labeled “SunScents™ Fragrance Dispenser” (Pages 23-25). It is designed to contain packages of a specially made fragrance available from your Sundance Spas dealer. The fragrance is carried into the hot tub water by the air coming through the injector system when the air blower is on.



CAUTION: To prevent personal injury, always turn off air blower before removing or installing SunScents dispenser cap. Use only Sundance SunScents fragrances in your new hot tub. Never remove the SunScents beads from their plastic cage for any reason! Install bead cage directly into SunScents dispenser. Never use this dispenser for any other type of fragrance. Always make certain that the dispenser cap is securely in place before operating the hot tub’s air blower.

880 SERIES

10.11 Optional Intelli-Sound™ Audio System


Sundance models with the optional audio system offer enhanced hot tub enjoyment by offering an integrated state-of-the-art audio system. These models include an integrated AM/FM/CD/MP3 Player receiver, four high fidelity spa engineered speakers for unsurpassed sound quality and long-life, and an integrated subwoofer for an enhanced acoustical experience.



10.12 Maxxus Massage/Waterfall Selector Diagram

Massage Selector Operation

Rotate Massage Selectors 1 & 2 to divert water between designated jet groups.

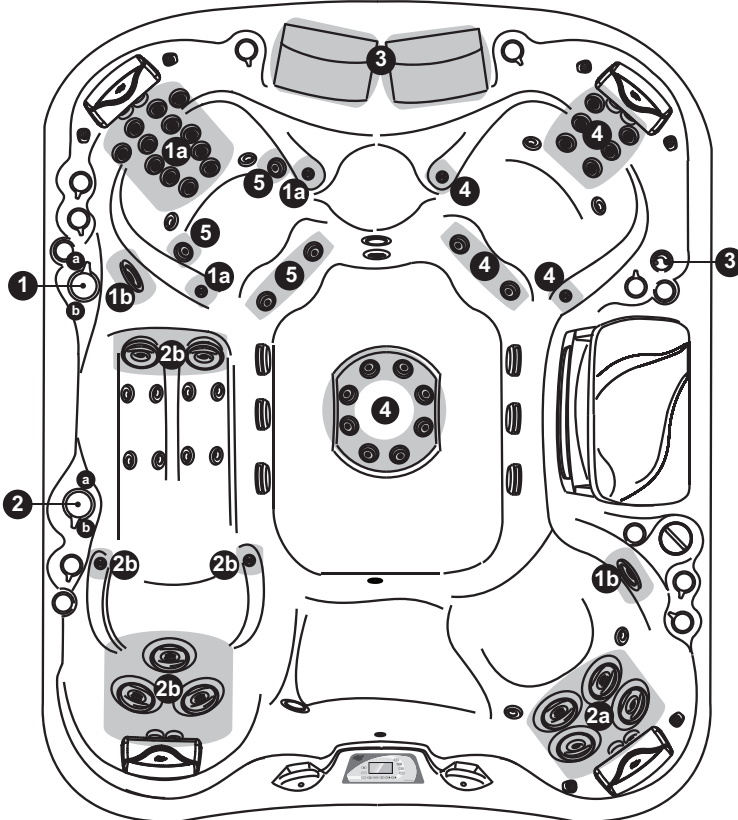

Massage Selectors (1-2)

- Massage Selector #1 controls pump #1.
- Massage Selector #2 controls pump #2.

Waterfall Selector (3)

- Waterfall Selector #3 controls waterfall output.

Continuously Powered Jets (4-5)


- Jets #4 are always on when jets pump #3 is running.
- Jets #5 are always on when jets pump #1 is running.

Spa operation subject to change without notice.

10.13 Maxxus Air Controls Diagram

Air Control Operation

Rotate Air Controls 1-8 to add air to designated jet groups.

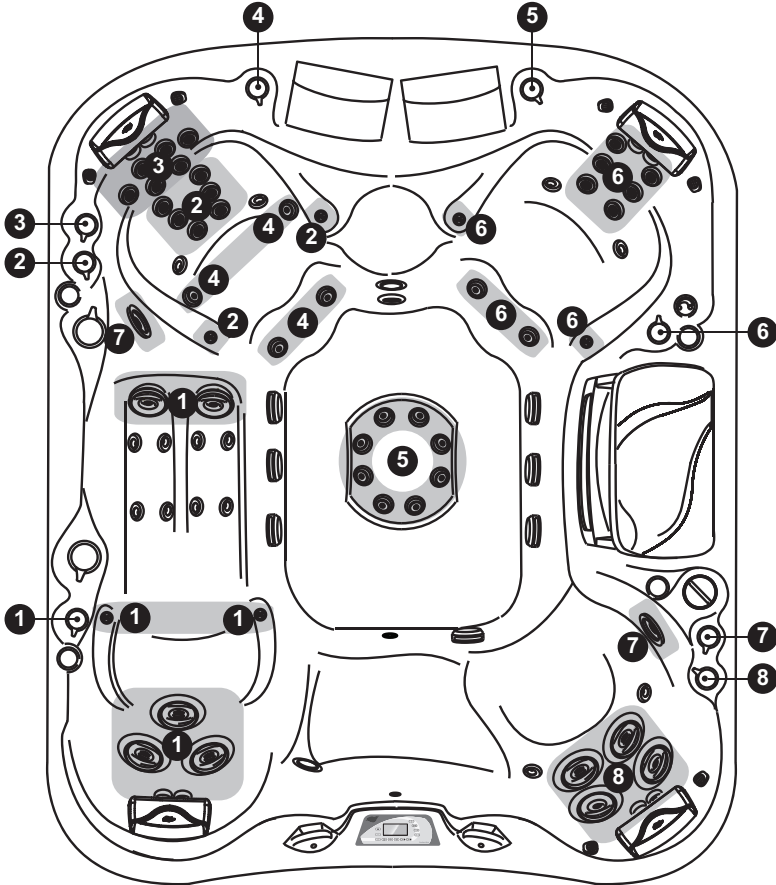


Spa operation subject to change without notice.

10.14 Optima Massage/Waterfall Selector Diagram

Massage Selector Operation

Rotate Massage Selectors 1 & 2 to divert water between designated jet groups.

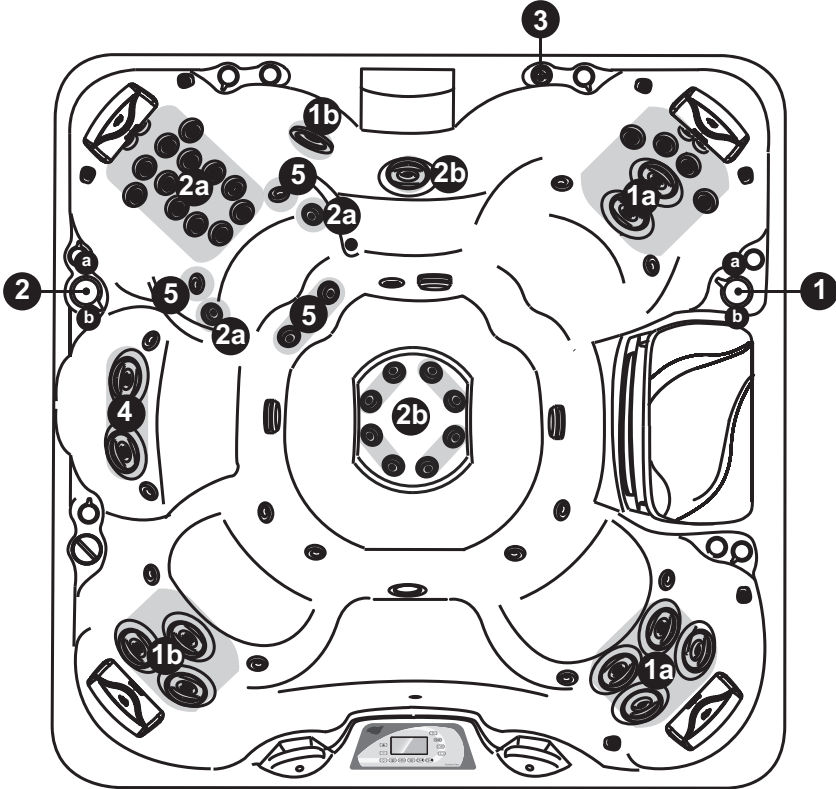

Massage Selectors (1-2)

- Massage Selector #1 controls pump #1.
- Massage Selector #2 controls pump #2.

Waterfall Selector (3)

- Waterfall Selector #3 controls waterfall output.

Continuously Powered Jets (4-5)


- Jets #4 are always on when jets pump #1 is running.
- Jets #5 are always on when jets pump #2 is running.

Spa operation subject to change without notice.

10.15 Optima Air Controls Diagram

Air Control Operation

Rotate Air Controls 1-5 to add air to designated jet groups.

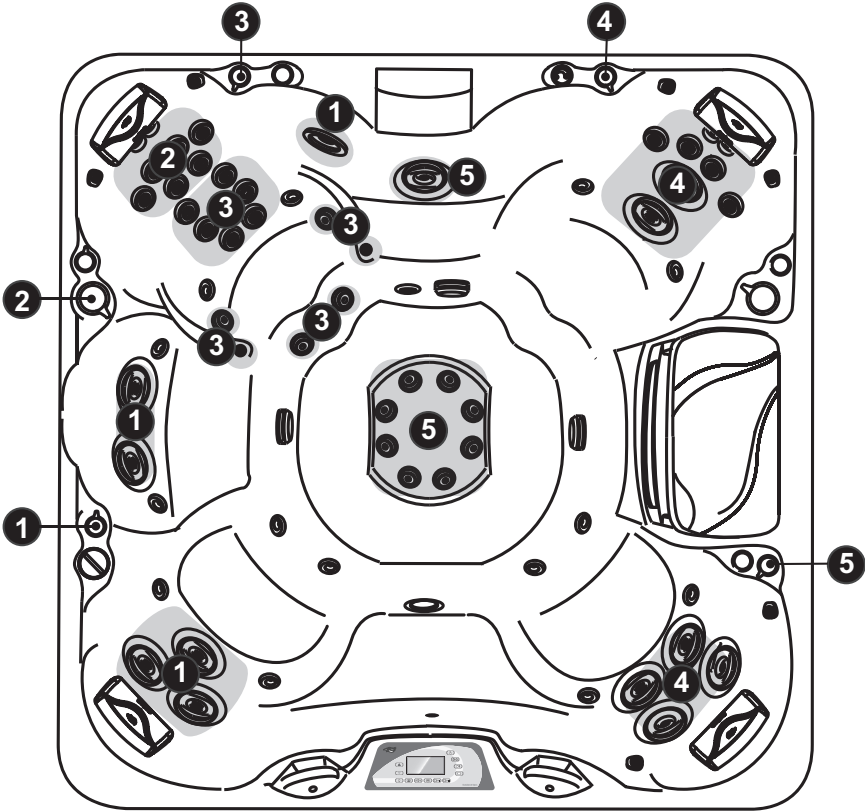


Spa operation subject to change without notice.

10.16 Cameo Massage/Waterfall Selector Diagram

Massage Selector Operation

Rotate Massage Selectors 1 & 2 to divert water between designated jet groups.

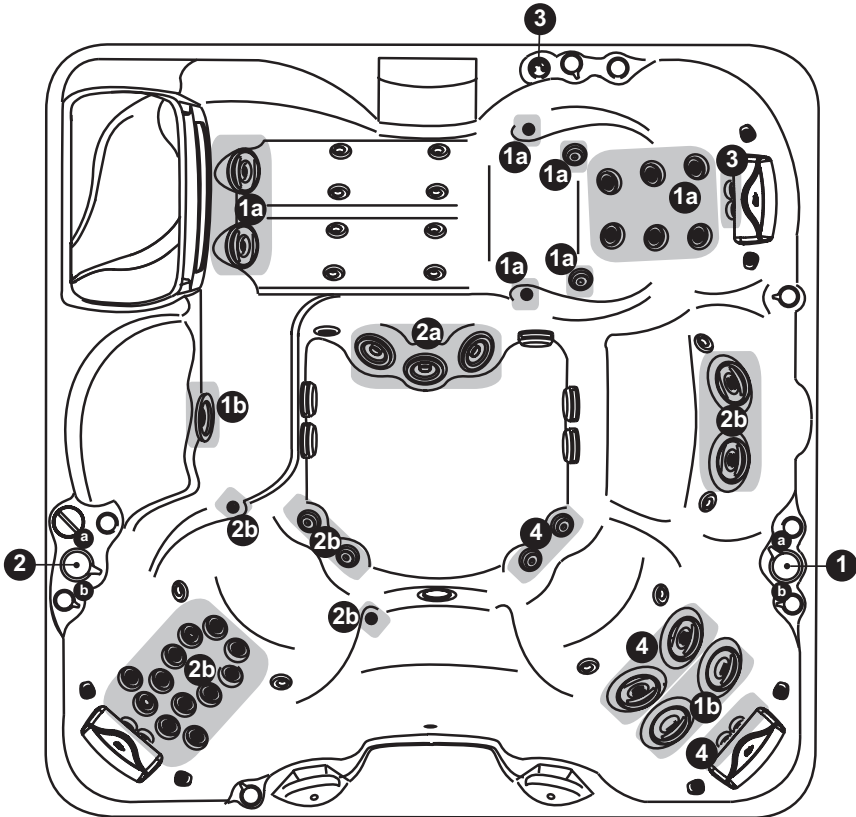

Massage Selectors (1-2)

- Massage Selector #1 controls pump #1.
- Massage Selector #2 controls pump #2.

Waterfall Selector (3)

- Waterfall Selector #3 controls waterfall output.

Continuously Powered Jets (4)


- Jets #4 are always on when jets pump #1 is running.

Spa operation subject to change without notice.

10.17 Cameo Air Controls Diagram

Air Control Operation

Rotate Air Controls 1-5 to add air to designated jet groups.

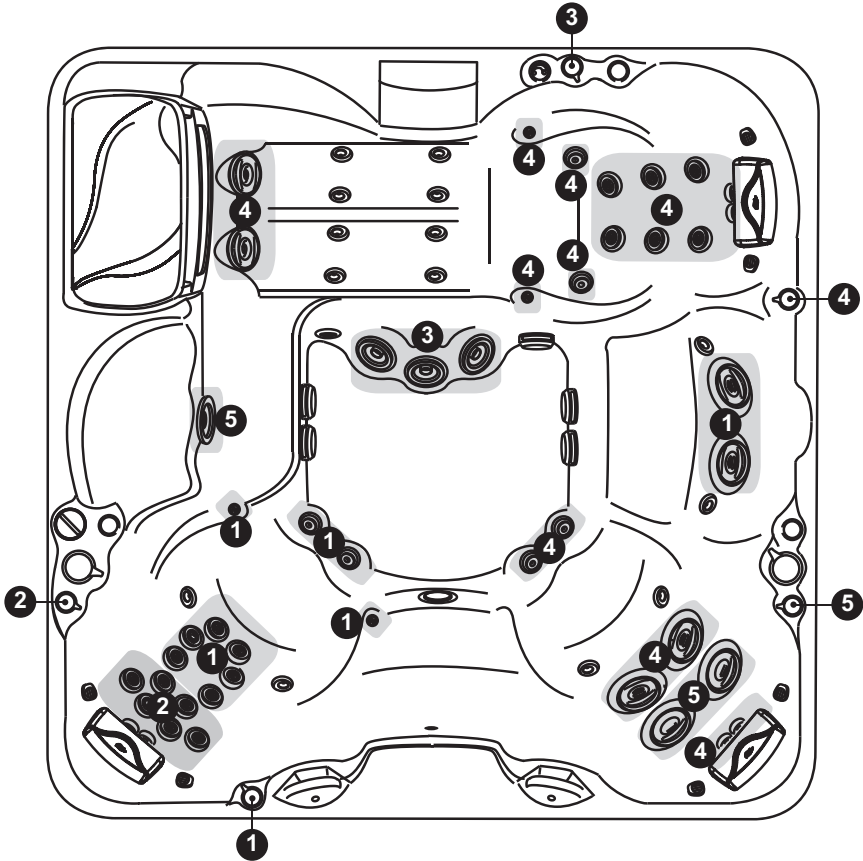

Spa operation subject to change without notice.

11.0 Heating Modes

The control system in your hot tub activates a programmable “Standard” or “Economy” mode which effects when the heater operates. Refer to Sections 11.1 and 11.2 below for additional information.


11.1 Standard Mode (Factory Default)

Standard mode is typically selected by customers in cold climates where heat up times are extended due to lower ambient temperatures. In this mode, water temperature is regulated by the set temperature which activates the heater automatically as needed.

11.2 Economy Mode

Economy mode is typically selected by customers in warm climates where heat up times are minimized due to higher ambient temperatures. In this mode, the water temperature is regulated by the set temperature only when a programmed filter cycle is running.

11.3 Selecting Standard or Economy Mode

Press the **(MODE)**  button to select either “Standard” or “Economy” mode. The control panel’s indicator on the right side of the LCD changes to indicate which mode is selected.

Note: “Standard” is shown when Standard Mode is selected. No display is shown when economy mode is selected.

11.4 Clean-Up “Blow-Out” Cycle

The clean-up cycle is once per day in both Standard and Economy modes at 12:00 (noon) for two minutes. This is not user programmable.


- Maxxus Models: Jets pump 3 and blower activate for approximately 45 seconds to circulate any water in the plumbing. Pump 3 shuts off, then pump 2 and the blower activate for approximately 45 seconds, then shut off. Finally, pump 1 activates and runs for approximately 30 seconds, then shuts off.
- Cameo/Optima Models: Jets pump 2 and blower activate for one minute to circulate any water in the plumbing. After 1 minute, pump 2 and blower shut off and jets pump 1 activates for 1 minute, then shuts off.








12.0 Programming Instructions

12.1 Programming Filter/Circulation Pump (Standard Mode)

The Sentry control system allows you to easily adjust two separate aspects of filter/circulation pump operation:

- The time of day (start time) the filter/circulation pump turns on.
- The length of time (duration) the filter/circulation pump operates.

The factory default start time is 12:00AM (midnight). The default duration is 24 hours. To make adjustments, press the **(CYCLE)**  button once to enter the filter/circulation pump programming mode. The LCD screen will display “Circ” At this time the system is ready to accept your changes:

- Press the **(SELECT)**  button once. The previously programmed start time appears on the LCD display.
- Press **(UP)**  or **(DOWN)**  buttons to adjust the start time in 30-minute increments.
- Press the **(SELECT)**  buttons to program duration.
- Press **(UP)**  or **(DOWN)**  buttons to program the duration time in 1 hour increments.
- Press **(DISPLAY)**  button to save changes and recall the main water temperature display.

Note: If no button is pressed within 30 seconds, all changes are recorded and the screen automatically returns to the standard water temperature display.

Note: When the standard mode is selected (Section 11.3), the filter/circulation pump automatically turns on for a heat call regardless of the pump’s programmed start time and duration.

12.2 Programmable Heat Cycles (Economy Mode Only)


Your hot tub comes with four 30-minute filter cycles which activate the filter/circulation pump while in economy mode. These cycles are factory programmed to start at 6:00 AM, 12:00 (noon), 6:00 PM, and 12:00 (midnight). The control system allows you to easily adjust two separate aspects of each cycle:

- The time of day at which it begins;
- The duration of the cycle.

Note: When “Economy” mode is selected (Section 11.3), the heater activates only during a programmed filter cycle period. When a Summer Logic condition is active (page 39), the filter/circulation pump will turn on for all programmed filter cycles.

Summer Logic: In warm weather, the water temperature in the hot tub may exceed the set temperature. This condition may occur due to heat transference from the filter/circulation pump and jets pumps. If the water temperature is higher than 95°F (35°C) and rises two degrees above the set temperature, a “Summer Logic” condition occurs that deactivates the filter/circulation pump and ozonator (if equipped). This safety feature cannot be altered! The filter/circulation pump and ozonator will remain off until the water temperature cools to the set temperature (except between 9am-11am when the filter/circulation pump runs for it’s mandatory 2 hour cycle.)

Note: Pressing the select button at this time will reactivate the circulation pump and waterfall feature for 1 hour. To help prevent a “Summer Logic” condition, it may be necessary to reduce filter/circulation pump cycles run times in warm weather.

To make adjustments, first press the **(CYCLE)**  button to enter the filter cycle programming mode. The LCD screen will display the following in the upper right corner:












1*



***Note:** Number will vary according to which filter cycle is being programmed.

This means the system is ready to accept you changes to the start time for cycle number one. Simultaneously, the large four-digit display in the center of the screen displays the currently programmed start time for that cycle. At this point, you have four options. You may:






1. Press **(UP)**  or **(DOWN)**  button to adjust the start time in increments of 30 minutes.
2. Press **(CYCLE)**  button to display and adjust each subsequent cycles start time. With each press, the currently programmed status will be shown in the large four digit display. To adjust any displayed value, simply press the **(UP)**  or **(DOWN)**  button.
3. Press **(SELECT)**  button to move down the menu from Start Time to Duration, with each press, the currently programmed duration will be shown in the large four-digit display. Press **(UP)**  or **(DOWN)**  button to adjust the duration in increments of 15 minutes.
4. Press **(DISPLAY)**  button to save changes and recall the main water temperature display.

Note: If no button is pressed within 30 seconds, all changes are recorded and the screen automatically returns to the standard water temperature display.









When a programmed filter/heating cycle activates, the LCD screen displays the following message:



***Note:** Number will vary according to which filter cycle is being programmed.









At any time, you may check the programming of any economy mode filter/heating cycle by first pressing **(CYCLE)**  button then moving through the menu by pressing either **(CYCLE)**  or **(SELECT)**  button. The programming is changed only by pressing **(UP)**  or **(DOWN)**  buttons during this process.

12.3 Adjusting Time of Day

The Sentry control system remembers the time of day even in the event of a prolonged power outage. However, it may occasionally be necessary to reset the time of day. For example: if you are not in the Pacific Time Zone you will want to reset the time for your own time zone. (The system will automatically adjust to and from daylight savings time.) To accomplish this, press **(DISPLAY)** , **(MODE)** , and **(DISPLAY)**  button within five seconds each. A number representing the hour will be displayed, followed by AM or PM. The hour will advance or decrease each time the **(UP)**  or **(DOWN)**  button is pressed within five seconds. Then, press the **(DISPLAY)**  button again to display minutes. Adjust minutes as necessary by pressing the **(UP)**  or **(DOWN)**  button. After 5 seconds, the display will return to normal and save your settings.


 

 



 

 


12.4 Main Control Panel Lock

To help prevent unauthorized use of your hot tub, the Sentry controls incorporate a unique panel locking system which disables the controls on the panel.

- To Lock The Main Control Panel: Press **(DISPLAY)** , **(MODE)** , and **(UP)**  buttons within five seconds each. A padlock symbol will appear on the LCD screen.  With the panel locked, all components are disabled from manual activation and the only settings that can be adjusted are the standard and economy filter/heating modes and time of day. All automatic hot tub functions will operate normally.
- To Unlock Main Control Panel: Press **(DISPLAY)** , **(MODE)** , and **(DOWN)**  buttons within five seconds. The lock symbol will disappear. All buttons are now active. 

12.5 Temperature Setting Lock

The hot tub's temperature setting can be locked to prevent unauthorized changes. When locked, all other hot tub buttons and functions operate normally.





- **To Lock Temperature Setting:** Press **(UP)**  or **(DOWN)**  button to display temperature setting, then immediately press the **(DISPLAY)** , **(MODE)** , and **(UP)**  buttons within five seconds each. A padlock symbol will appear on the screen. 
- **To Unlock Temperature Setting:** Press **(UP)**  or **(DOWN)**  button to display temperature setting, then immediately press the **(DISPLAY)** , **(MODE)** , and **(DOWN)**  buttons within five seconds. 

12.6 Programming the Change Filter Reminder


Your new hot tub is equipped with a programmable “Change Filter” reminder icon that flashes on the control panel display after a specified number of days. It is designed to remind you to perform routine filter system maintenance on a regular basis but does not affect hot tub operation in any way. The “Change Filter” reminder icon must be reset at each interval. It offers a selectable range from 10-120 days or can be disabled (turned off). We recommend an initial setting of 30 days (1 month) to remind you of this important maintenance step.

Note: This reminder must be reset at each filter inspection/replacement interval. Refer to Section 13.1 for filter replacement instructions.

Programming Instructions

1. Press the **(CYCLE)**  button two times. The main display reads “FIL” indicating the “Change Filter” display program has been accessed.
2. Press **(SELECT)**  button once to display the currently programmed duration or to view days elapsed since last filter cleaning interval.
3. Press **(UP)**  or **(DOWN)**  button to change duration setting as follows: 0 - 10 - 20 - 30 - 40 - 50 - 60 - 70 - 80 - 90 - 100 - 110 - 120 - OFF.

Note: Selecting “0” forces the Change Filter reminder icon to stay on indefinitely.

4. Press **(DISPLAY)**  button once to save changes and return to the standard water temperature display.

Note: If no button is pressed within 30 seconds, all changes are recorded and the screen automatically returns to the standard water temperature display.

13.0 Hot Tub Maintenance

Proper and regular maintenance of your hot tub will help it retain its beauty and performance. Your authorized Sundance Spas dealer can supply you with all the information, supplies, and accessory products you will need to accomplish this.



WARNING: Risk of Injury. The suction fittings in this spa are sized to match the specific water flow created by the pump. If it is necessary to replace the suction fittings or the pump, be sure that the flow rates are compatible.

Because of the risk of injury,

- Never operate or use the spa if the filter, filter lid, or skimmer assembly are broken or any part of the skimmer assembly is missing. Please contact your dealer or nearest service center for service.
- Never replace a suction fitting with one rated less than the flow rate marked on the original suction fitting.

13.1 Cleaning/Replacing the Filter Cartridge

A programmable “Change Filter” reminder icon flashes on the control panel display after a specified number days to remind you to perform routine maintenance on your filter system. This reminder must be reset at each interval. Refer to Section 12.6 (page 41) for additional information and programming details.





Your Sundance hot tub is equipped with a two-stage MicroClean Ultra filter cartridge assembly under the filter lid (Figures F through H, pages 23-25). Debris is filtered by the filter/circulation pump drawing water through the filter assembly 24 hours a day, 7 days a week (unless programmed otherwise). To ensure optimum performance, clean the outer pleated filter and center insert monthly. Then replace the center insert every 6 months, or as needed thereafter. Refer to procedure below for details.


All models include a suction cover filter (#6540-213) located directly under the MicroClean Ultra filter cartridge assembly that prevents debris from entering the hot tub plumbing when jets pump 1 is running. This filter should be cleaned every 2 months.



ALWAYS TURN POWER TO THE HOT TUB OFF BEFORE REMOVING THE MICROCLEAN ULTRA FILTER ASSEMBLY!

Filter Cleaning/Replacement Procedure

- 1**  **TURN POWER TO SPA OFF! NEVER OPERATE SPA WHEN FILTER IS NOT PROPERLY INSTALLED OR IF WEIR ASSEMBLY IS DAMAGED OR ALTERED!** 

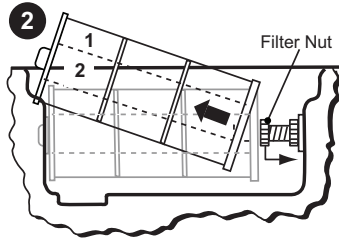

Filter Cleaning Requirements:

- Clean MicroClean Ultra™ Pleated Filter (1) monthly and replace every 18 months (6473-165).
- Rinse off MicroClean Ultra™ Insert (2) monthly and replace every 6 months or as needed (6473-164).

Filter Removal Instructions:


Loosen filter nut to provide clearance, then remove MicroClean™ Ultra Filter Assembly from spa.

3 Monthly Filter Cleaning Procedure

We recommend cleaning the outer pleated filter (1) with a high pressure water nozzle and the filter insert (2) with a low-pressure water nozzle monthly. Periodically, the outer pleated filter cartridge (1) will require a more thorough cleaning to remove embedded oils and minerals by using special spa filter cleaners offered by your spa dealer. **Always remove the center filter insert (2) before cleaning the outer filter (1) with chemicals. Never use filter cleaners of any kind on the filter insert (2) or it may be damaged.**

Procedure:

1. Grasp center filter insert end cap (2) in hand and pull outward from pleated cartridge (1). If filter insert (2) is 6 months old, throw it away and purchase new one. DO NOT install new insert at this time.
2. Rinse debris from all outer filter (1) pleats using a garden hose and high-pressure nozzle. Repeat process until all filter pleats are clean. Then rinse debris from inside of filter (1). If chemical cleaners are used, follow manufacturers instructions.

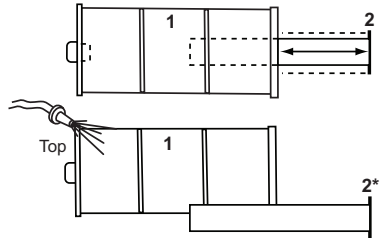

Lightly rise filter insert (2) and place in clean location. *DO NOT use chemical cleaners or high-pressure nozzle on insert (2) or it may be damaged!

3. Install filter insert (2) into outer pleated filter (1) by gently sliding inward until a slight resistance is felt approximately 1/4" from bottom. Lightly tap insert end with palm of hand to "snap" in place. Insert is properly installed when end cap rests "flush" against outer filter end cap.
4. Install Filter assembly back into spa by performing step 2 in reverse order. Tighten filter nut so it just touches the filter face. **DO NOT OVERTIGHTEN!**
5. Turn power to spa back on.

Replacement filter cartridges may be purchased from your Sundance Spas dealer.

13.2 Draining And Refilling

About every 3 to 6 months, you should replace the hot tub's water. The frequency depends on a number of variables including the amount of use, attention paid to water quality maintenance, etc. You will know it is time for a change when you cannot control sudsing and/or you can no longer get the normal feel or sparkle to the water even though the key water balance measurements are all within the proper parameters.




CAUTION! READ THIS BEFORE DRAINING: To prevent damage to the hot tub's components, turn off power to the hot tub at the circuit breaker before draining it. Do not turn the power back on until your hot tub has been refilled. There are certain precautions to keep in mind when draining your hot tub. If it is extremely cold, and the hot tub is outdoors, freezing could occur in the lines or the equipment (see "Winterizing", page 46). On the other hand, if it is hot outdoors, do not leave the hot tub's surface exposed to direct sunlight for long periods.

Draining Procedures:

1. Turn off power to hot tub at breaker.
2. Locate the 3" gray drain valve cap on side of the hot tub cabinet. Unscrew drain valve cap to expose the underlying male garden hose fitting (figures A-B).
3. Attach female garden hose end to drain fitting and route opposite end of garden hose away from hot tub (figure B).
4. Pull outward on garden hose end at drain connection (approx. 3/8") to open drain valve and release water from hot tub (figure C). Water drains at approximately 3 gallons per minute.
5. After hot tub has drained, close drain valve by pushing inward on garden hose end at drain connection until you feel it bottom out. Remove garden hose and install gray drain cap before refilling hot tub.

Note: The gray drain cap cannot be installed until the drain valve is closed. Refer to "Hot Tub Fill Up Procedure" (page 16) for recommended filling instructions.

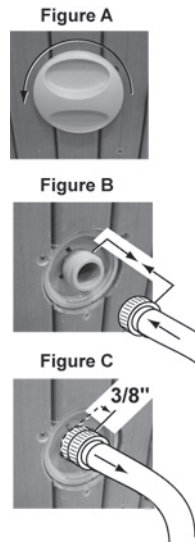


13.3 Cleaning The Hot Tub Interior

To preserve the sheen of your hot tub's surface, it is crucial that you avoid using abrasive cleaners or cleaners which have adverse chemical effect on the surface. If you are not certain as to the suitability of a particular cleanser, consult your authorized Sundance Spas dealer. Regardless of the cleanser used, use extreme care to assure that no soap residue is left on the surface. This could cause severe sudsing when the hot tub is refilled.

13.4 Pillow Care

Remove and clean the headrest pillows as needed with soapy water using a cloth or soft-bristle brush. To maintain water resistance and luster, apply a quality vinyl conditioner once a month. Always remove the pillows when adding chemical shock treatment to the spa water. The pillows can be returned to the spa when the sanitizer reading drops below 4.0 ppm.

 1

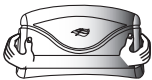

Place both hands on pillow with thumbs as shown.

2




Press inward with thumbs to curl pillow lip inward so you can grab it with fingertips.

3



Flex pillow lip inward 2-3" to get a good grip on the ends.

4

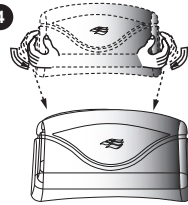

Gently pull outward on pillow to release mounting stud from receptacle on spa shell.

5

Wash pillow(s) in a mild detergent soap and warm water solution. Never machine wash your pillows or attempt to clean them with a non-approved vinyl cleaning agent!

6

To reinstall pillows: Simply align pillow over mounting stud receptacle, then gently push inward to snap in place.

13.5 Maintaining the Hot Tub Cabinet

The hot tub cabinet require little or no maintenance of any kind. To clean, wipe cabinet with a clean towel and mild detergent soap solution.



CAUTION: Never spray cabinet with a high pressure garden hose for any reason since this action may induce an electrical short in the hot tub's electrical equipment.

13.6 Maintaining The Cover

Using the Sundance insulating hot tub cover anytime the hot tub is not in use will significantly reduce your operating costs, heat-up time, and maintenance requirements. To prolong the life of the cover, handle it with care and clean it regularly using mild soap and water. Periodic treatments with a special conditioner developed for Sundance hot tub covers will help protect against deterioration caused by U.V. rays from the sun. Never allow anyone to stand or sit on the cover, and avoid dragging it across rough surfaces.

13.7 Winterizing

Your Sundance hot tub is designed to automatically protect itself against freezing when operating properly. During periods of severe freezing temperatures, you should check periodically to be certain that the electrical supply to the hot tub has not been interrupted. In extreme, bitter cold weather (less than -20°F) verify standard mode is selected (Section 11.3, page 37) to protect the hot tub from freezing.

If you do not intend to use your hot tub, or if there is a prolonged power outage during periods of severe freezing temperatures, it is important that all water be removed from the hot tub and equipment to protect against damage from freezing.

For expert winterization of your hot tub, contact your authorized Sundance Spas dealer. In emergency situations, damage can be minimized by taking the following steps:



CAUTION: Turn off power to hot tub.

1. Follow the directions on page 44 for draining the hot tub.
2. As the water level drops below the seats, use whatever means necessary to get the water out of the recessed seating areas and into the footwell.

3. When the water level ceases to drop, use whatever means available to remove any remaining water from the footwell.
4. Remove the equipment-side cabinet panels and locate the drain plugs in the front of each pump (Figures A and B, page 12). Remove these plugs to allow the water to drain out of the pumps and heater.

Note: Approximately 1 to 2 gallons will be released during this procedure. Use a wet/dry vacuum or other means to keep this from flooding the equipment compartment. Replace the drain plugs.

5. Loosen hose clamp at bottom of heater (Figures A and B, page 12) and pull hose off of heater fitting (twist the hose back and forth while pulling downward. Tip hose down and allow to drain, then reinstall hose and clamp.
6. Re-install cabinet side panels and cover hot tub so that no moisture can enter into it. Consult your Sundance Spas dealer if you have any questions regarding winter use or winterizing.

13.8 Restarting Your Hot Tub in Cold Weather

If you want to start up your hot tub after it has sat empty for a time in freezing temperatures, be aware that the water remaining in certain sections of the piping may still be frozen. This situation will block water flow preventing the hot tub from operating properly and possibly damaging the equipment. We recommend you consult your dealer for guidance before attempting to restart your hot tub under these conditions.

14.0 Water Quality Maintenance

Maintaining the quality of the water within specified limits will serve to enhance your enjoyment and prolong the life of the hot tub's equipment. It is a fairly simple task, but it requires regular attention because the water chemistry involved is a balance of several factors. There is no simple formula, and there is no avoiding it. Procrastination in regard to water maintenance will result in poor and potentially unhealthful conditions for soaking and even damage to your hot tub investment. For specific guidance on maintaining water quality, consult your Authorized Sundance Spas dealer who can recommend appropriate chemical products for sanitizing and maintaining your hot tub.



CAUTION: Never store hot tub chemicals inside the hot tub's equipment bay.

14.1 pH Control

pH is a measure of relative acidity or alkalinity of water and is measured on a scale of 0 to 14. The midpoint of 7 is said to be neutral, above which is alkaline and below which is acidic. In hot tub water, it is very important to maintain a slightly alkaline condition of 7.4 to 7.6 pH. Problems become proportionately severe the further outside of this range the water gets. A low pH will be corrosive to metals in the hot tub equipment. A high pH will cause minerals to deposit on the interior surface (scaling). In addition, the ability of the sanitation agents to keep the hot tub clean is severely affected as the pH moves beyond the ideal range. That is why almost all hot tub water test kits contain a measure for pH as well as sanitizer.

14.2 Sanitizing

To destroy bacteria and organic compounds in the hot tub water, a sanitizer must be used regularly. Your Sundance hot tub is equipped with the Brominator™, a special compartment built into the floating skimmer gate to hold bromine tablets. By regulating the number of bromine tablets in the Brominator™ you can control the amount of bromine which is actively working in your hot tub water. A bromine residual of 2.0-4.0 ppm is generally considered desirable. A two-part bromine system or granular chlorine (dichlor) are also acceptable sanitizers.

IMPORTANT: Do not use chlorine tablets (trichlor) in your hot tub. This chemical can have an extremely corrosive effect on certain materials in the hot tub. Damage caused by use of this chemical, or improper use of any chemicals, is not covered under the hot tub's warranty.

14.3 Other Additives

Many other additives are available for your hot tub. Some are necessary to compensate for out-of-balance water, some aid in cosmetic water treatment and others simply alter the feel or smell of the water. Your Authorized Sundance Spas dealer can advise you on the use of these additives.

14.4 Ozone Water Maintenance System

This system is optional on North American models and standard equipment on export 50 Hz spa models. If your spa is equipped with the Sundance CD Ozone water purification system you will find that your water stays fresh and clear with significantly less chemical sanitizer

usage. You will also probably be able to go longer between complete spa draining's.

14.5 Handrail Maintenance

The handrails in your Sundance hot tub are manufactured from a high quality 316 stainless steel alloy. Many people are familiar with the term "stainless steel" and are surprised to learn that it does indeed rust and corrode in the presence of chloride salts, free chlorine, or sulfide gasses. The bad news is the environments that produce these elements are ocean spray, salted highways, chemical treatments added to swimming pools and hot tubs, and ground water in numerous coastal areas. The good news is with proper care, your hot tub's handrails can maintain their original finish.

If your stainless handrails shows signs of rusting you should:

- Wash with fresh water (a good detergent won't hurt).
- Clean with a good car chrome polish.
- Wax with an automotive or fiberglass wax.

You should never:

- Clean with chlorinated cleaners or scouring powders.
- Use sand paper, "Scotch Brite", Brillo pads, or similar abrasive products.
- Clean with muratic or hydrochloric acids. Vinegar is ok, but it won't do much to remove rust.

15.0 Troubleshooting - Display Messages

There are a number of unique functions designed into your Sundance hot tub to protect it from damage and/or to aid in troubleshooting. Following is a listing of all the possible messages along with their meanings:

Message	Meaning
	Overheat Protection (Heater is deactivated, filter/circulation pump is activated). Water temperature is above acceptable limits. Do not enter the water! Remove hot tub cover to speed cooling. See "Water is too hot" (page 52). If condition persists, contact your Sundance Spas dealer or qualified service technician.

Message	Meaning
COOL	If the hot tub water is more than 20°F cooler than the temperature setpoint, jets pump #1 and heater will automatically activate to provide freeze protection. The hot tub will stay in this mode until the water temperature reaches 15 degrees below the set temperature then turns off. No corrective action is necessary.
FLO*	<p>FLOW SWITCH (Heater is deactivated. The filter/ circulation may also be deactivated). Proper flow of water is inhibited or a flow switch has malfunctioned. Check for proper water level and for clogged filter (pages 42-43). Contact your Sundance Spas dealer or qualified service technician.</p> <p>*Note: This message can also appear if the pump has not regained prime after the hot tub has been drained and refilled. If you suspect that this is the case, see the instructions on page 52 under “pump does not operate and icon does.”</p>
HOT	Circuit board temperature has exceeded acceptable limit. This message will disappear when the circuit board temperature drops below acceptable limit. If condition persists, provide shade for the side with the hot tub equipment.
ICE	<p>FREEZE PROTECTION</p> <p>A potential freeze condition has been detected. No action is required. Jets pump(s) operate until the hot tub is out of danger. Note: This error commonly occurs when the hot tub is first filled because tap water is often very cold.</p>
PnL	Communication between the control panel and/ or remote control panel and circuit board is faulty. Contact your Sundance Spas dealer or qualified service technician.

Message	Meaning
----	“WATCHDOG” (hot tub is deactivated) A problem has been detected which could cause damage to the hot tub or its components. Contact your Sundance Spas dealer or qualified service technician.
Sn1	OPEN SENSOR (heater disabled) or SHORTED SENSOR (hot tub is deactivated) The high-limit temperature sensor is non-functional. This must be repaired only by an Sundance Spas dealer or qualified service technician.
Sn3	OPEN or SHORTED SENSOR (heater disabled). The main temperature sensor is non-functional. This must be repaired only by an Sundance Spas dealer or qualified service technician.
FL02 1CE2	CLOSED or SHORTED FLOW SWITCH ON SYSTEM STARTUP (system disabled) Flow switch is non-functional. This must be repaired only by an authorized dealer or qualified service technician.

16.0 Troubleshooting - Procedures

In the unlikely event your hot tub is not working the way you believe it should, please first review all the installation and operating instructions in this manual and check the message on the panel display; second, if you are still not satisfied it is working properly, please follow the appropriate troubleshooting instructions.

PROBLEM	PROCEDURE
None of the components operate (i.e. pump, blower, light)	<p>Check the control panel lights.</p> <ol style="list-style-type: none"> 1. If there are letters or symbols displayed on the screen, refer to the previous section to determine meaning and action required. 2. If nothing appears on the screen: <ol style="list-style-type: none"> a. Check the household circuit breaker. b. Contact you Sundance Spas dealer or qualified service technician.

PROBLEM	PROCEDURE
Pump does not operate and icon does	<p>Depress JETS Button.</p> <ol style="list-style-type: none"> 1. If no sound is detected or if a buzzing sound is detected, turn off power to the spa and contact your authorized dealer or qualified service technician. 2. If motor operates, but now water flows to jets: <ol style="list-style-type: none"> a. Pump may not be properly primed. See instructions below. b. Contact your Sundance Spas dealer or qualified service technician.

Pump Priming Instructions:

This method must be used for the jets pumps because these pumps are not connected to the main filter system in any way.

1. Turn off the power to the spa.
2. Remove the handle from the massage selector supplied by the pump you are priming.
3. Loosen the massage selector's cap slightly (counterclockwise), listening for the air to seep out.
4. Tighten the cap finger tight, replace the handle, and turn the spa's power back on.



CAUTION: If freezing conditions exist and pump is not operational, take measures to protect the system from freeze damage. See Section titled "Winterizing", page 46.

PROBLEM	PROCEDURE
Poor jet action (See Figures F-H, pages 23-25)	<ol style="list-style-type: none"> 1. Make certain the jets pump is turned on. 2. Check position of massage selectors. 3. Open air control for selected jet system. 4. Check for adequate water level. 5. Check for dirty filter (pages 42-44).
Water is too hot	<ol style="list-style-type: none"> 1. Reduce thermostat setting (page 21). 2. Switch hot tub to "Economy" mode to turn heater on only during programmed filter cycles (page 37).

PROBLEM	PROCEDURE
No heat	<ol style="list-style-type: none"> 1. Check thermostat setting. 2. Keep the cover in place while heating. 3. If “heater on” indicator is lit (page 22) but no temperature rise is experienced after a reasonable period of time, contact your Sundance Spas dealer or qualified service technician.
Filter/ circulation pump off	<ol style="list-style-type: none"> 1. Verify filter/circulation pump is programmed to run 24 hours a day (page 38). 2. Filter/circulation pump cycle canceled by power interruption. Wait 24 hours for hot tub to reset or press select button for manual activation. 3. Hot tub water is warmer than 95°F (35°C) and two degrees warmer than the set temperature. The “Summer Logic” safety feature has activated. See note on page 39 for details.


Should checking the above steps fail to correct the problem, please call your authorized dealer so that he may arrange service.

Sundance builds the best hot tubs in the industry. Nonetheless, we are always striving to improve the quality and features of our products. Your input as a Sundance hot tub owner is a cherished part of this process. If you have any comments or suggestions, or if you wish to be informed on any new products for your hot tub, please write to us.

CONGRATULATIONS on your good taste and welcome to the happiest and most relaxed family in the world!




18.0 North American 60 Hz Cameo/Optima Electrical Wiring Diagram

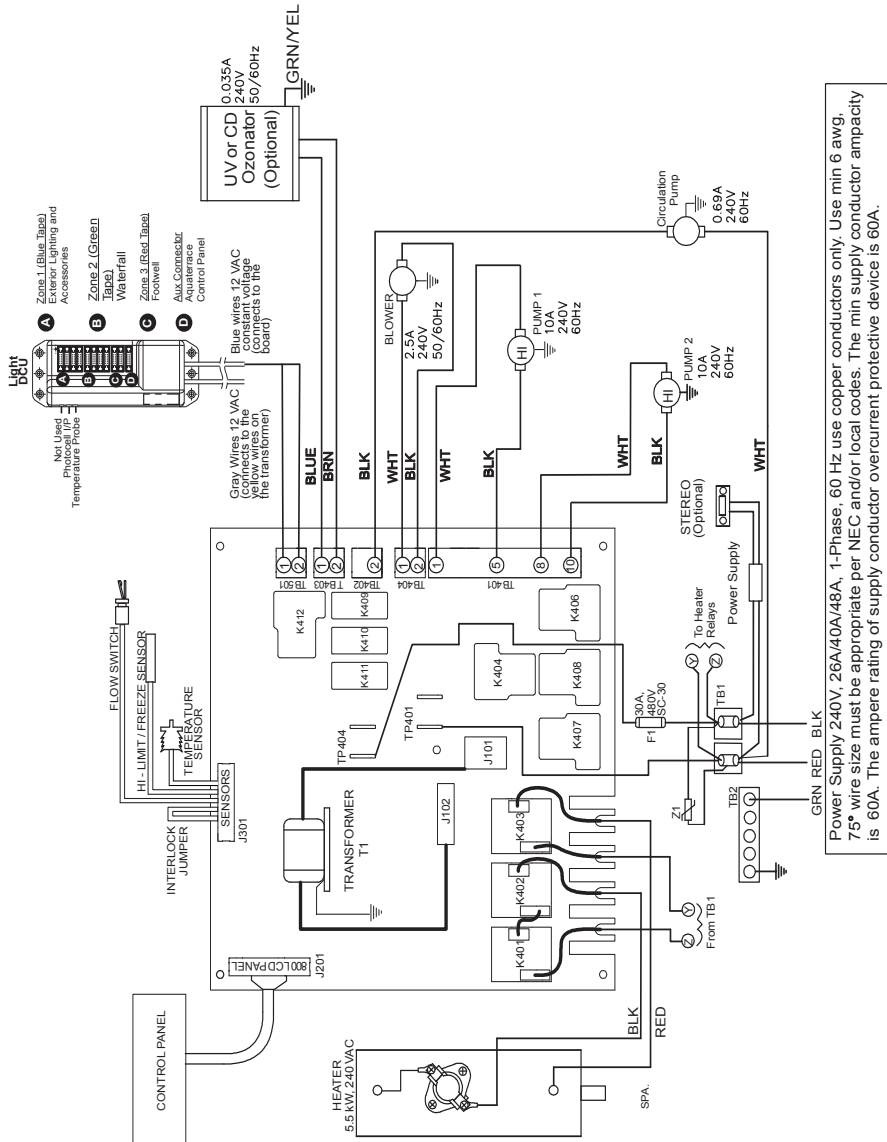

Power Supply 240V, 26A/40A/48A, 1-Phase, 60 Hz use copper conductors only. Use min 6 awg. 75° wire size must be appropriate per NEC and/or local codes. The min supply conductor ampacity is 60A. The ampere rating of supply conductor overcurrent protective device is 60A.

19.0 Circuit Board Pin Assignments


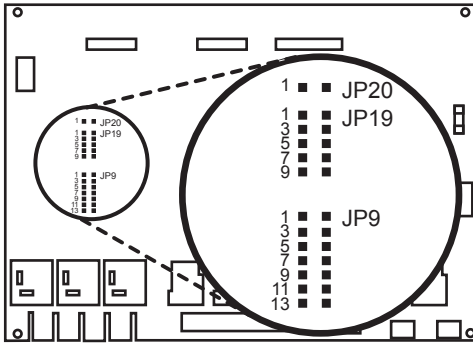


CAUTION: Always turn off power to spa before making circuit board changes.

Refer to pages 14-15 for additional jumper configuration details.

JP20-1	Not Used
JP19-1	On = °C Off = °F
JP19-3	Not Used
JP19-5	Enables the logic for the Multi Color LED Light
JP19-7	Not used
JP19-9	Not Used
JP9-1	Not Used
JP9-3	Not Used
JP9-5	Not used
JP9-7	On = 60A Logic Off = 40/50A Logic (See Section 6.0 pages 14-15 for logic details)
JP9-9	On = 2 or 3 Pump Logic Off = 1 Pump Logic
JP9-11	On = 40A Logic (See pages 14-15 for logic details)
JP9-13	Not used

20.0 Typical Hot Tub Wiring Diagrams A-B (North American 60 Hz Models Only)

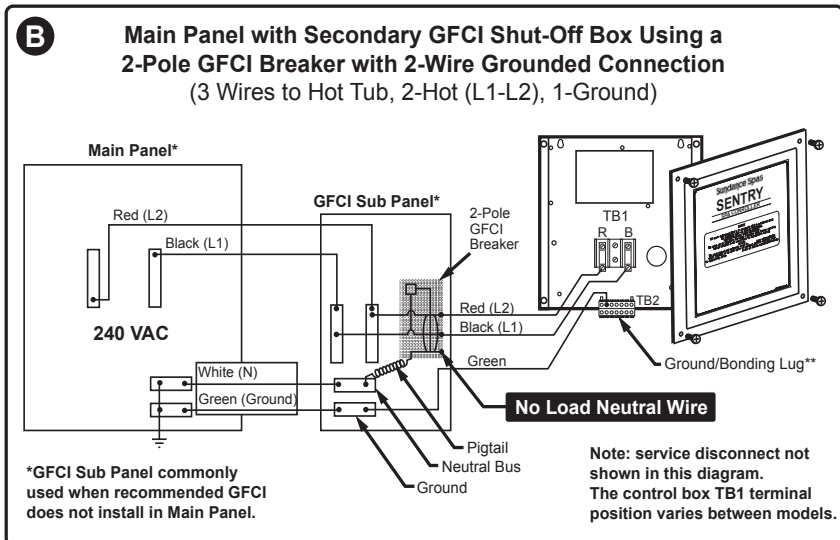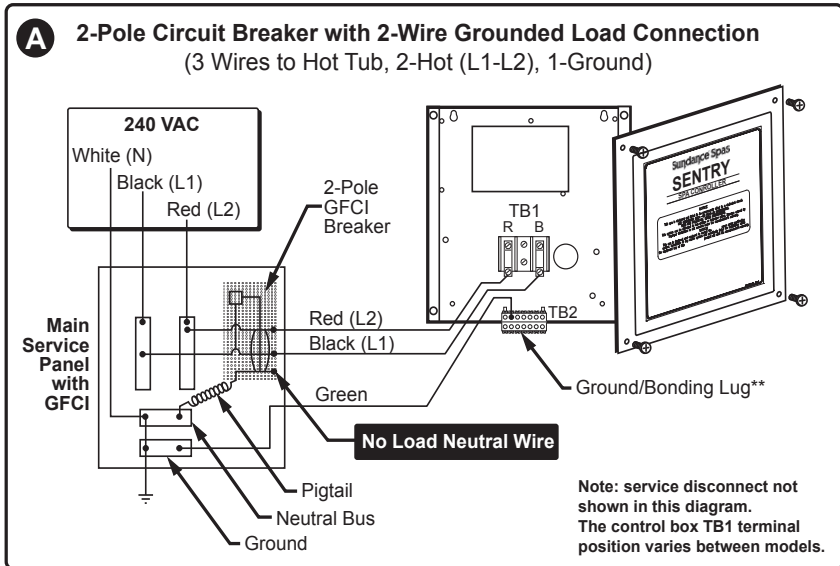


The following UL requirements must be observed for all spas with optional stereo components installed.

- A. "CAUTION - Risk of Electric Shock. Do not leave compartment door open",
- B. "CAUTION - Risk of Electric Shock. Replace components only with identical components", and
- C. "Do not operate the audio/video controls while inside the spa".
- D. "WARNING - Prevent Electrocutation. Do not connect any auxiliary components (for example: cable, additional speakers, headphones, additional audio/video components etc.) to the system".
- E. These units are not provided with an outdoor antennae, when provided, it should be installed in accordance with Article 810 of the National Electric Code, ANSI/NFPA 70.
- F. Do not service this product yourself as opening or removing covers may expose you to dangerous voltage or other risk of injury. Refer all servicing to qualified service personnel.
- G. When the power supply connections or power supply cord(s) are damage; if water is entering the audio/video compartment or any electrical equipment compartment area; if the protective shields or barriers are showing signs of deterioration; or if there are signs of other potential damage to the unit, turn off the unit and refer to a qualified service personnel.
- H. This unit should be subjected to periodic routing maintenance (for example, once every 3 months) to make sure that the unit is operating properly.

P/N: 6530-509, Rev. A

22.0 Optional Intelli-Sound™ Stereo Receiver Features

22.1 Intelli-Sound Stereo Receiver General Controls

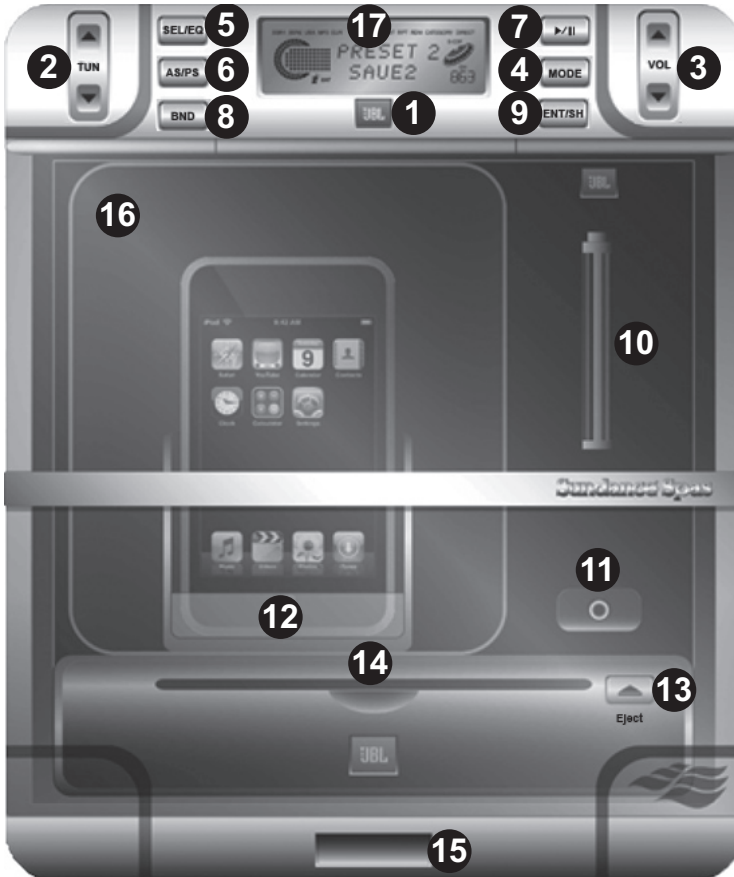

- | | |
|-----------------------------|--------------------------------|
| 1. Power On/Off Button | 10. USB Docking Station |
| 2. Tune/Seek Up/Down Button | 11. AUX Input Jack |
| 3. Volume Up/Down Button | 12. iPod Docking Station |
| 4. Mode Button | 13. Disc Eject Button |
| 5. SEL/EQ Button | 14. CD Installation Slot |
| 6. AS/PS Button | 15. Front Panel Release Button |
| 7. MUTE Button | |
| 8. BAND/RPT Button | |
| 9. ENT/SH/RDM Button | |

22.2 Intelli-Sound Stereo Receiver Operation

1. Power On and Off

Press power button (1) once to turn on stereo system. Press a second time to turn off.

2. Adjusting Volume

Press VOL up/down button (3) to increase or decrease volume. Current volume setting is briefly displayed (0 to 45).

3. Mute

In Radio or AUX mode, press mute button (7) once to mute audio output ("MUTE" flashes on display). To restore audio output, press button (7) a second time, or press volume up or down button. In CDP, USB, NAND mode, press button (7) to pause playback. Press again to resume playback.

4. Program Selection

Press MODE button (4) to cycle through available program sources as follows: Radio --> CDP --> USB --> NAND --> IPOD --> AUX --> Radio. If a source is unavailable (e.g.: No CD, USB or IPOD inserted), that source will not appear on the display (17).


5. Adjusting DSP Level

Press EQ button (5) repeatedly until display reads "FLAT". Then press VOL up/down button (3) to select sound mode: Flat, Rock, Soft Rock, Jazz, Classic, Dance, Pop, Soft, Hard, Party, Vocal, Hip-Hop, Dialog, Bass Boost 1 to 3, Loudness 1 to 16, or Flat.

6. Adjusting Bass Level

Press EQ button (5) repeatedly until display reads "BAS". Press VOL up/down button (3) to choose desired setting. A display of "BASS 0" indicates center, -1 to -7 indicates bass cut, and +1 to +7 indicates bass boost.

Note: Unit returns to volume mode if volume control is not operated for 3 seconds.

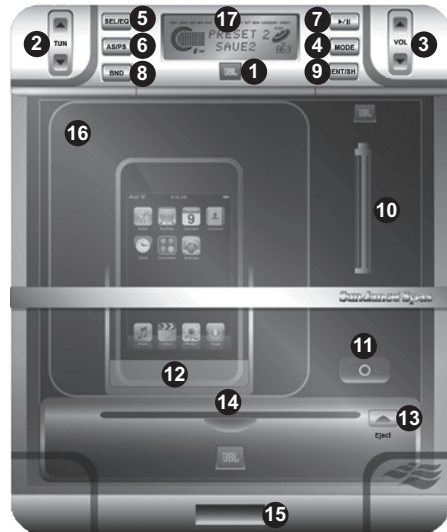

7. Adjusting Treble Level

Press EQ button (5) repeatedly until display reads "TRE." Press VOL up/down button (3) to choose desired setting. A display of "TRE 0" indicates center, -1 to -7 indicates treble cut, +1 to +7 indicates treble boost.

Note: Unit returns to volume mode if volume control is not operated for 3 seconds.

8. Adjusting Balance Level

Press EQ button (5) repeatedly until display reads "BAL." Press VOL up/down button (3) to choose desired setting. A display of "BAL R-L" indicates center, L1 to 15 indicates left balance, R1 to 15 indicates right balance.

Note: Unit returns to volume mode if volume control is not operated for 3 seconds.

9. Adjusting Fader Level

Press EQ button (5) repeatedly until display reads "FAD." Press VOL up/down button (3) to choose desired setting. A display of "FAD F-R" indicates center, R1 to 15 indicates rear fade, F1 to 15 indicates front fade.

Note: Unit returns to volume mode if volume control is not operated for 3 seconds.

10. Adjusting Beep Level

Press and hold down EQ button (5) for about 2 seconds until display reads "BEEP 2ND", then release. Press VOL up/down button (3) to select either Beep 2ND or Beep on option.

Note: Unit returns to volume mode if volume control is not operated for 3 seconds.

11. Adjusting I-VOL Level

Press and hold the EQ button (5) for about 2 seconds, then repeatedly press until display reads "I-VOL" (Initial Volume Level Adjustment). Press VOL up/down button (3) to choose desired setting (0 to 45), then press ENT button (9) to confirm. This feature regulates the max volume level during power up.

Note: Unit returns to volume mode if volume control is not operated for 3 seconds.

12. Adjusting Area

In FM2 band, press and hold the EQ button (5) for about 2 seconds, then repeatedly press until display reads "USA" or "EUR". Press

880 SERIES

VOL up/down button (3) to choose desired setting, then press and hold the BAND button (8) for 2 seconds to confirm selection.


Note: Unit returns to volume mode if volume control is not operated for 3 seconds.

13. Open/Close

Front Panel

Press firmly on the release button (15), then open front panel (16) by gently lifting upward on bottom edge.

To close front panel, gently flip panel down, then press firmly on panel directly above release button (15) until you hear an audible “click.” Keep front panel closed at all the times to prevent water intrusion, except when changing discs.

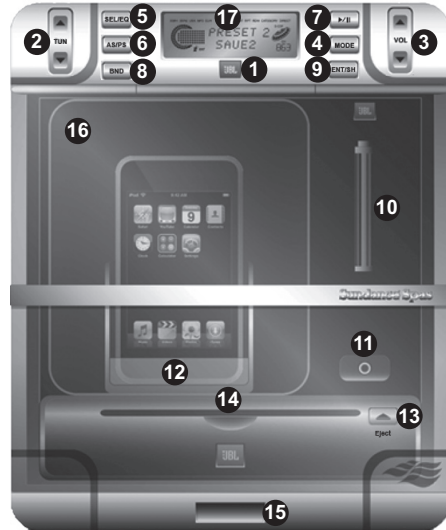

CAUTION: Never insert wet discs into unit or CD player will be damage!

22.3 Intelli-Sound Radio Operation

1 Radio Operation.

Press MODE button (4) to select Radio mode. Station frequency is indicated on display.

- To Select Band: press BAND button (8) repeatedly to scroll through radio mode as follows: FM1 --> FM2 --> FM3 --> AM1 --> AM2 --> FM1. Each radio band stores up to 6 independent stations, for a total of 18 FM and 12 AM presets.
- To Program Station Presets in Radio mode: Press and hold SH button (5) until display reads “SHIFT”. Press and hold the Tune Up/Down button (2) for 2 seconds, then repeatedly press to select preset 1 to 6. At desired preset, press the ENT button (9) to store current frequency into selected preset.

Note: When power to spa is shut off for any reason, all station presets are reset.

2. Automatically Setting Station Presets

Press and hold the AS/PS button (6) for approximately 2 seconds until you hear a beep that confirms the memory function is engaged. The unit will search for six strong stations and automatically store them on the current band. All 18 FM and 12 AM presets can be set sequentially by selecting the next band and continuing the operation during auto programming.

3. Seek/Manual Tune

Press TUN up/down button (2) once to activate manual tuning mode, then press TUN up or down repeatedly to manually increase or decrease displayed frequency. Press and hold either TUN up or down button (2) for at least 2 seconds to activate auto tuning mode. The unit will automatically search and stop at the next higher or lower station with sufficient signal strength.

Note: After 3 seconds, seek mode is re-enabled.

4. Preset Scan Function

- Press AS/PS button (6) once to enter scan mode. Each preset station in the current band will play for 5 seconds while the preset number is flashes on the display (17). At the desired station, press AS/PS button (6) a second time.
- Press and hold ENT/SH button (5) until display reads "SHIFT." Repeatedly press TUN up or down button (2) to choose preset 1-6, then press ENT/SH button (9) to confirm selection.

22.4 Intelli-Sound CD Player Operation

1. Insert, Play, and Eject a CD

Open front panel (16) by pressing firmly on release button (15) and lifting panel upward from bottom edge. Gently insert CD into slot (14) with label facing up. The CD will be drawn inside by the motorized mechanism. DO NOT FORCE! Close front panel by folding down, then press firmly on panel directly above release latch (15) until you hear an audible "click." Keep front panel closed at all the times to prevent water intrusion, except when changing discs. CD playback will automatically begin after CD is loaded.

- To Play CD: Press the MODE button (4) to change to CD mode. The CD will play. The display shows current track, play time, and animates a 3-D rotating disc during playback.
- To Remove CD: Open the front panel and press CD eject button (13). Remove CD from drive and close front panel as

instructed in step 13
(page 62).

2. Changing CD Tracks and Music Seek

To advance to next track, press TUN up button (2) once to increase track counter one track. When final CD track is reached, play will resume on track #1.

- To fast forward through tracks: Press and hold TUN up button (2) until track counter displays desired track, then release button.


- To rewind current track: Press and hold the TUN down button (2) The track will quickly rewind until you release the button.

3. Random, Repeat

- Random “Shuffle” Mode: Press SH button (9) to play the CD tracks in random order. The left side of the display (17) reads “RDM” when random mode is enabled. Press a second time to deactivate.
- Repeat Mode: Press BND button (8) to repeat current CD track. The left side of the display reads “RPT” when repeat mode is enabled. Press a second time to deactivate.

4. Searching File or Folder in MP3/WMA CD

- To Search File in CDP (MP3/WMA) mode: Press AS/PS button (6) to enter track searching mode. Then press the VOL up/down button (3) to scroll through available tracks. At desired track, press ENT button (9) to confirm selection. Once a track is selected, it will automatically begin to play.
- To Search Folder in CDP (MP3/WMA) mode: Press and hold

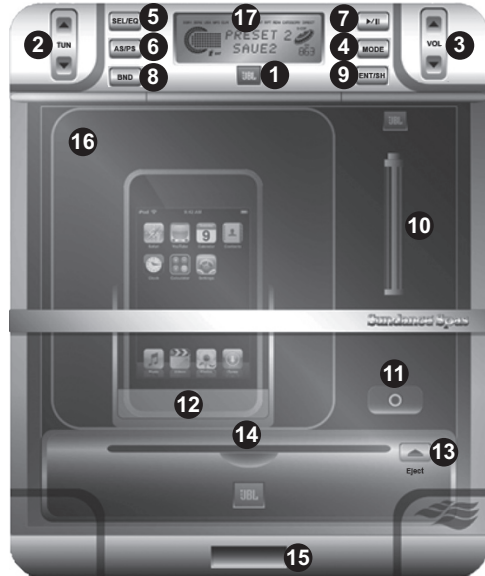

AS/PS button (6) for 2 or more seconds to enter folder searching mode. Then press VOL up/down button (3) to search through available folders. At desired folder, press ENT button (9) to confirm selection. Once a folder is selected, it will automatically begin to play the first track in the selected folder.

22.5 Intelli-Sound USB & NAND Operation

1. Play USB or NAND (internal memory)

Open the front panel and plug a USB device into the USB Docking Station (10). The USB device will begin to play automatically. Close the front panel. The “USB” symbol on the display indicates that a USB device is connected.

- To Play connected USB device: Press MODE button (4) to change to USB mode. The USB will play. The display (17) shows the current track, play time, and USB symbol. If no USB device is connected, simply plug a USB device into the USB docking station (10) and the unit will automatically switch to USB mode.
- To Play NAND: Press MODE button (4) to change to NAND mode. The NAND will play. The display shows the current track and play time. The Play/Pause, Repeat, and Random function for USB and NAND are the same as CD Player Operation (page 63-64).

2. Copying Music Files from USB to NAND (internal memory)

In USB mode, press and hold SEL button (5) for about 2 seconds until “ONE COPY” displays on LCD (17), then press VOL up or down button (3) to choose ONE or ALL. Press ENT button (9) to confirm selection.


- If ONE COPY is selected: The record percent “DOWN LOAD xx%” will display on the LCD (17). After copying is finished, the next track will automatically begin playback.
- If ALL COPY is selected: “the number of total track --> the number of recorded track” will display on LCD (17). After copying is finished, the unit will beep for about 3 seconds, then automatically begin playback of track #1.

3. Deleting Music Files from NAND (internal memory)

In NAND mode, press and hold SEL button (15) for about 2 seconds

until “ONE DEL” displays on LCD (17). Use VOL up or down button (3) to choose ONE or ALL. Press ENT button (9) to confirm selection.

- If ONE DEL is selected: Next track will begin playback after file deletion has finished.
- If ALL COPY is selected: “DELETING” will display on LCD, then “NO FILE” will display after deletion process has finished.

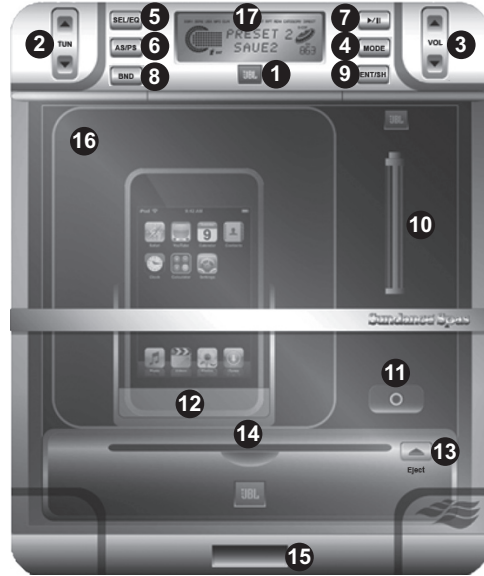

4. Searching File or Folder in USB/NAND

- To Search File In USB or NAND mode: Press AS/PS button (6) once to enter track searching mode, then press VOL up or down button (3) to scroll through available tracks. At desired track, press ENT button (9) to confirm selection. Once track is selected, it will automatically begin to play.
- To Search Folder in USB or NAND mode: Press AS/PS button (6) to enter folder searching mode. Then press VOL up/down button (3) to scroll through available folders. At desired folder, press ENT button (9) to confirm selection. Once a folder is selected, it will automatically begin playback of first track in folder.

22.6 Intelli-Sound iPod Operation

1. Play iPod

Open front panel (16) and plug an iPod into the iPod Docking Station (12) as shown. Refer to step 13 (page 62) for details. The iPod will begin to play automatically. Close front panel. The “iPod” symbol will display to indicate an iPod is connected.

- To Play connected iPod: Press MODE button (4) to change to iPod mode. The iPod will play. The display shows current track, play time, and iPod symbol to indicate an iPod is connected. If there is no iPod connected, simply plug an iPod into the iPod docking station (12), the unit automatically switches to iPod mode.

Note: The DRM (Digital Rights Management Files) cannot be played on this deck. iTunes audio files need to be converted into mp3 format for use with this system. Personal files (mp3, wma, or aac) can be played as long as they are not purchased through iTunes.

2. Searching File or Folder in iPod

- To Search File In iPod mode: Press AS/PS button (6) to enter track searching mode. Press VOL up/down button (3) to scroll through available tracks. At desired track, press ENT button (9) to confirm selection. Once a track is selected, it will automatically begin to play.
- To Search Folder In iPod mode: Press and hold ENT/SH button (9) for more than 2 seconds until "SHIFT" appears on LCD (17), then press TUN up/down button (2) to scroll through folders. At desired folder, press the ENT button (9) to confirm selection. Once folder is selected, it will automatically begin to play first track in folder.

3. Display ID3

In iPod mode, press and hold AS/PS button (6) for 2 or more seconds to enter ID3 display mode. Then press again for 2 or more seconds to display MUSIC on LCD (17). Press VOL up/down button (3) to select: Music, Artists, Songs, Genres, or Composer displays.

22.7 Docking your iPod Music Player

1. Docking Your iPod

The Docking Station for iPod is compatible with all dockable Apple iPod models.

To Install an Apple iPod:

- A. Open Docking Station door (A) as outlined in step 13 (page 62).
- B. Center iPod over Docking Station Interface Port, then gently press downward as shown (B).
DO NOT FORCE!
- C. Close Docking Station door as shown (C), then press firmly on door directly above door release latch (15) until you hear an audible "click."



WARNING: Electrical Shock Hazard Exists! Never install or remove iPod while hands are wet or while sitting partially immersed or fully immersed in spa!



CAUTION: Never leave iPod in Docking Station when spa is not in use to prevent damage from outdoor elements! Never spray Docking Station with pressurized water hose for any reason! Damage to iPod or spa stereo system caused by water intrusion is not covered under the manufacturer warranty! Damage to Docking Station port or iPod due to excessive force or improper alignment during installation or removal from Docking Station is not covered under warranty.

2. Setting Up The iPod for Use


- A. Select and play preferred song/album/playlist prior to docking iPod.
- B. Press "MODE" button on stereo receiver or wireless remote until display reads "IPOD."

Note: USB Docking Station is similar to the iPod Docking Station operation.

22.8 Generic MP3 Player Operation

1. Connecting Your MP3 Player

- A. Plug in any MP3 player's headphone output jack with supplied cable into the auxiliary port (11) using the supplied audio RCA cable. Close stereo compartment during use to prevent moisture from entering the compartment.

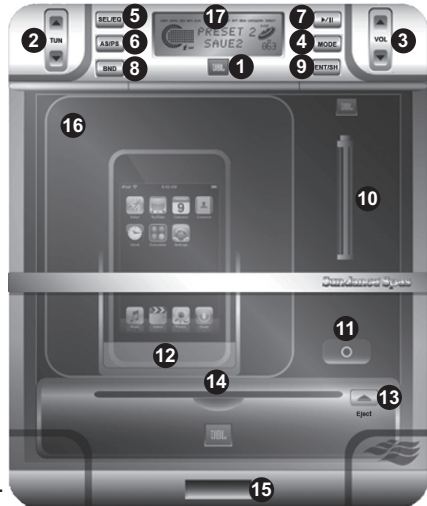

2. Setting Up The MP3 Player for Use

- A. Select preferred song/ album/playlist prior to plugging in MP3 player and start playback.
- B. Press "Mode Button" on stereo receiver until the LCD display reads "AUX".

Note: All external MP3 player playback operations are performed solely by the MP3 Player with the exception of volume control and "Mode Button" selector, which can be controlled via wireless remote or on the stereo receiver.



WARNING: Electrical Shock Hazard Exists!

Never install, handle or remove MP3 player while hands are wet or while sitting partially or fully immersed.

22.9 Intelli-Sound Stereo Troubleshooting

1. Unit will not turn-on

Make sure spa power is turned on, then check both harness fuses on side of unit making sure they are the proper ratings:

- Yellow memory B+ line (1A fuse); Red ACC line (10A fuse).
- When faced with a malfunction during operation, push BND button (8) and Eject button (13) at the same time to reset software.
- With spa power off, use a paperclip to press the reset button located besides the USB Docking Station (10) to do a hardware reset.

Note: It will be necessary to re-enter the radio preset memories and other personal settings after performing a reset. After resetting player, always ensure all functions are operation correctly.

2. Fogged CDs and Lens

This condition may occur when it's cold. Wipe fogged CDs with a soft cloth. Fogged optical components inside the unit will return to normal operation after an hour in a heated environment.

22.10 Intelli-Sound Stereo Specifications

Tuner

FM usable sensitivity	10dB
FM 50dB quieting sensitivity	25dB
FM alternate channel selectivity	80dB
FM stereo separation @ 1kHz	30dB
AM usable sensitivity	35dB

CD Player

Sampling frequency (8X oversampling)	44.1kHz
Channel separation @ 1kHz	50dB
Signal-to-noise ratio	60dB
Frequency-to-noise response @ +/-2dB	20-20kHz

Audio

Maximum power output	(25 watts x 4 channel, 4Ω, 1kHz)100W
Continuous power	13 watts X 4, 4ohms,THD=1%,1kHz
Bass boost/cu.	100Hz +/- 10dB
Treble boost/cut	10kHz +/-10dB

General

Nominal power supply	14.4 VDC
Allowable power supply	10.8-15.6 VDC
Current consumption	<15mA

 
Speaker impedance 4-8 Ω

22.11 Standard Wireless Remote Control Functions





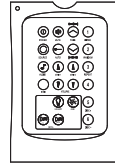

A. Use Wireless Remote to Operate Stereo

This remote is included with the optional Intelli-Sound Stereo system.






- Usable range 15' (5m)
- Never leave the remote under the spa cover for any reason
- Battery Replacement: Use Coin Type, CR2025 or equivalent




Wireless Remote Control Command Summary			
Button	Operation	Button	Operation
 POWER	Power Button: On/Off.	 INTRO	Intro/Station 1 Preset Button: • In CD mode: provides you a 5 second preview of each track. • In radio mode: plays preset station 1 or press and hold for 3 seconds to set station 1.
 MUTE	Mute Button: On/Off.	 RANDOM	Random/Station 2 Preset Button: • In CD mode: plays CD tracks in a random mode. • In radio mode: plays preset station 2 or press and hold to set station 2.
 SOURCE	Source Button: Selects Radio, CD or iPod/MP3 Player function.	 REPEAT	Repeat/Station 3 Preset Button: • In CD mode: repeats same CD track until the feature is deactivated. • In radio mode: plays preset station 3 or press and hold to set station 3.
 AUTO	Auto Button: Scans through preset radio stations.	 4	Station 4 Preset Button: has no CD/ Radio function. Press and hold to set station 4 or pause iPod when docked in Docking Station.
 AUDIO	Audio Button: Selects treble, bass, fader or balance, audio settings.	 5 DISC-	Station 5 Preset Button: has no CD/ Radio function. Press and hold to set station 5.
 BAND	Band Button: Selects from AM to FM band.	 6 DISC+	Station 6 Preset Button: has no CD/ Radio function. Press and hold to set station 6.

Wireless Remote Control Command Summary			
 <p>ZONE 1 ZONE 2</p> <p>VOLUME</p>	<p>Volume Buttons: Zone 1 buttons are used to adjust volume levels. Zone 2 buttons not used.</p>	 <p>TUNE</p>	<p>Tune Buttons:</p> <ul style="list-style-type: none"> • In CD mode: Advances/Rewinds tracks. • In radio mode: Selects radio stations.
 <p>LIGHT</p>	<p>Light Button: Controls light intensity: High - Med - Low</p>	 <p>1</p>	<p>Jets 1 Button: Turns Jets pump 1 On and Off</p>
 <p>AIR</p>	<p>Air Button: Turns the Blower on and off</p>	 <p>2/3</p>	<p>Jets 2 & 3 Button: Turns Jets pump 2/3 On and Off</p>
<p>Note: Remote Control has no effect on MP3 player playback if/when the generic MP3 output cable is used.</p>			

B. Use Wireless Remote to Operate iPod

Button	Operation
Press 	Next track
Press  & Hold	Fast forward
Press  x 2	Return to beginning of current track
Press  x 3	Recall previous tracks
Press 	Pause (press again to resume play)

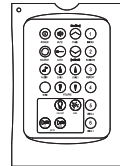

22.12 Wireless Remote Battery Replacement Procedure

1. Start by removing the rubber cover to the remote (Figure A).



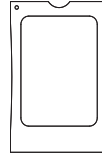 


Fig. A

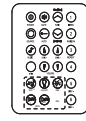 

2. Turn the remote unit over and locate the battery door (Figure B).

 Fig. B

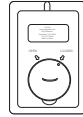


3. Rotate the battery door, with a coin, counterclockwise until the dot aligns with the Open arrow (Figure C).

Fig. C



4. Remove battery door using coin to pry the door upward (Figure D).

 Fig. D

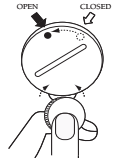


5. Replace battery using CR2025 or equivalent (Figure E).

Fig. E




6. Reinstall the battery cover, using the coin to close (Figure F).

 Fig. F

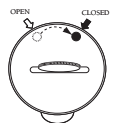

7. Reinstall rubber cover onto remote (Figure G).

 Fig. G

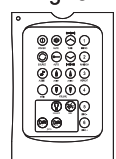

Note: Remote unit is water resistant not waterproof, therefore the unit should be stored in a dry location within your home and never be left in the spa while the cover is on and spa is not in use.

